

## SERVICE AND OPERATING MANUAL PortaPump<sup>®</sup> Model SPA 1<sup>1</sup>/<sub>2</sub>-E Model SPA40-E


**Design Level 3** 

### **OPERATING INSTRUCTIONS**

**THE PUMP:** This pump is a totally enclosed, submersible dewatering unit. It is powered by a 1/3 HP, 12 volt DC 30 AMP motor. Battery clips on the power cord allow easy connection to any 12 volt vehicle battery.

**SWITCHING:** The on-off switch is located on the power cord.

**CONNECTING TO BATTERY:** When connecting the clips to a battery, arcing is eliminated by keeping the on-off switch in the "off" position. Connect the red battery clamp to the positive (+) battery terminal. Connect the black battery clamp to ground: preferably on the vehicle's engine to a solid, metallic, stationary point. The connection should be at least 18 inches (480mm) from the battery.

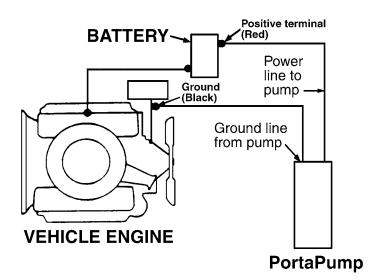



### IMPORTANT

Read these safety warnings and instructions in this manual completely, before

installation and start-up of the pump. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.



### DANGER

Turn off before connecting battery clamps to battery. Arcing could result.

### A DANGER

DANGER: Not for use with fluids that have a flash point below 100° F (38° C) [examples: gasoline, alcohol.] Sparking could result in death.



## IMPORTANT

Should unit not operate, always check freeness of rotation of impeller by inserting screwdriver through hole in base plate into slot in end of shaft.

**HOSE:** Since the pump develops relatively low pressure, it is recommended that non-collapsible hose be used for maximum pumping rates.

**HOISTING & LOWERING:** Attach a line to the metal handle on the top of the pump for hoisting or lowering the unit. **Do not use power cable for handling unit.** 

**TO OPERATE:** Lower unit into liquid to be pumped and activate switch. Pump can be run for a few minutes without liquid, however, **do not run completely dry for extended periods.** Damage to shaft seal may result.

**RUNNING TIME:** This unit draws about 30 amperes and can be operated about 1hour on a fully charged 55 AMP-hour battery and still permit starting of vehicle under normal conditions. Caution should be used when running time exceeds 30 or 40 minutes without engine running to recharge battery, particularly in cold weather when battery efficiency is lowered. Battery size (AMP-hour rating) and the use of other accessories such as lights and radios, etc., must be taken into consideration for practical running periods without engine running.

**OVERLOAD PROTECTION** is provided by means of a 40 amp automatic reset circuit breaker, located under top cover.

spa105dl3sm

Tel: 866-777-6060 Fax: 866-777-6383

#### Model SPA11/2-E and SPA40-E Design Level 3 Page 1

Website: www.springerpumps.com Int'l: +001 267 404 2910

WARREN RUPP, INC., A unit of IDEX Corporation • 800 N. Main Street • Mansfield, OH 44902 USA • (419) 524-8388 Fax (419) 522-7867

#### **TROUBLE SHOOTING**

**NOTE:** Most common cause of failure to run is due to hardened mud and sand at impeller. Remove strainer to check.

- MOTOR WILL NOT RUN:
- 1. Poor connection at battery.
- 2. Impeller locked with foreign material.
- 3. Insufficient impeller clearance.
- 4. Damaged power cable or loose connection internally in motor assembly.
- 5. Bad switch or circuit breaker. Connect power leads direct to motor leads to check.
- 6. Worn motor brushes or out of position to make contact with armature.
- PERFORMANCE LOW:
- 1. Strainer screen partially plugged.
- 2. Impeller rubbing. Check freeness of rotation with screwdriver inserted through hole in base plated into slotted end of shaft.
- 3. Battery not fully charged.
- 4. Discharge restriction such as kinked hose or excessive discharge head. **Motor runs backwards:** 
  - 1. Check wiring for correct polarity.

#### SERVICE AND REPAIR INSTRUCTION


**DISASSEMBLY:** Impeller and shaft seal can be inspected and serviced from lower end of pump by removal of 4 capscrews securing base plate, strainer screen, and suction cover. Screwdriver slot is provided in end of motor shaft to turn shaft while holding impeller for removal. This permits removal of impeller without disassembly of upper motor housing to hold motor shaft. Alternately, there is a shaft extension with two flats on the rear of the motor for use when the impeller is difficult to remove. The upper motor cover must be removed to expose this shaft extension.

To service motor remove 4 hex nuts and bump top cover free from housing tube. Raise sufficiently to disconnect power cable connections. Slide housing tube up from pump casing and motor will be exposed for service or removal.

When servicing the PortaPump and replacing the impeller (part number 444.001.010.) or suction cover (part number 258.001.157.) follow these instructions: The impeller has been revised to typically require 1 shim (previously 7). The suction cover has been revised to require 1 gasket (previously 5).

**IMPORTANT**: Make certain that wire leads are installed per diagram below. Install top cover as indicated by arrow and instruction on top of cover. Make sure wires

do not contact motor shaft when installing motor cover.

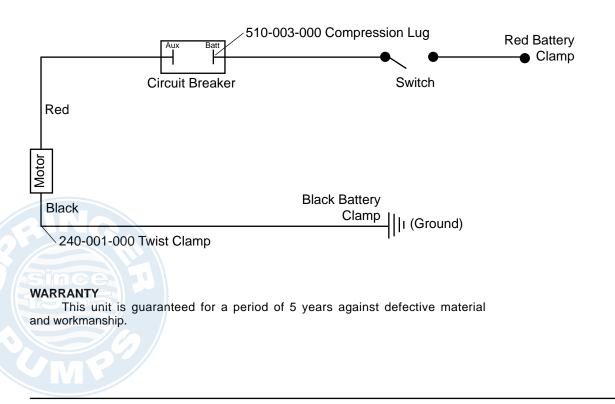

Model SPA1<sup>1</sup>/<sub>2</sub>-E and SPA40-E Design Level 3 Page 2

Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910




# SERVICE AND OPERATING MANUAL PortaPump<sup>®</sup> Model SPA 1<sup>1</sup>/<sub>2</sub>-E **Model SPA40-E**


**Design Level 3** 

ITEM NO.	PART NUMBER	DESCRIPTION	TOTAL RQD.	
1	710-004-330	Screw, Self-Tapping	2	Repair Parts shown in <b>bold face (darke</b>
2	258-017-157	Cover, Motor	1	type are more likely to need replacement
3	545-005-330	Hex Nut	1	after extended periods of normal use
4	405-009-000	Handle	1	They are readily available from most Wa
5	543-001-162	Nut, Gland	2	ren Rupp distributors. The pump owne may prefer to maintain a limited inventor
6	770-007-162	Spacer, Gland	2	of these parts in his own stock to reduc
7 7	675-016-360	Ring, Sealing	2	repair downtime to a minimum.
8	545-004-330	Hex Nut	4	IMPORTANT: When ordering repair part
9	900-004-330	Lock Washer	4	always furnish pump model number, seria
10	807-011-330**	Stud	4	number and type number.
11	<b>270-001-000</b>	Circuit Breaker	-	MATERIAL CODES
12	170-028-330			The Last 3 Digits of Part Number
		Capscrew, Hex Head 1/4-20 X .875		000Assembly, sub-assembly; and some purchased
13	900-001-330	Lock Washer	8	Items 010Cast Iron
14	<u>360-001-440</u>	Gasket, Casing	1	012Powered Metal
15	170-003-115	Capscrew, Hex Head 1/4-20 X 2.75		015Ductile Iron 020Ferritic Malleable Iron
16	444-001-010	Impeller	1	025Music Wire
17	740-001-115	Shim	As. Req.*	080CarbonSteel AISI B-1112 100Alloy 20
18	258-001-157	Cover, Suction	1	110Alloy Type 316 Stainless Steel 111Alloy Type 316 Stainless Steel (Electro Polished)
19	612-001-156	Plate, Strainer	1	112Alloy "C"
20	700-001-330	Screen, Strainer	1	113Alloy Type 316 Stainless Steel (Hand Polished) 114303 Stainless Steel
21	181-001-155	Casing, Volute, 1½ NPT	1	115302/304 Stainless Steel 117440-C Stainless Steel (Martensitic)
				120416 Stainless Steel (Wrought Martensitic) 123410 Stainless Steel (Wrought Martensitic) 148Hardcoat Anodized Aluminum 1492024-T4 Aluminum
	181-001-155E	Casing, Volute, 1½ BSPT (tapered)	) 1	1506061-T6 Aluminum 1516063-T6 Aluminum
22	560-022-360	O-Ring	2	1522024-T4 Aluminum (2023-T351)
23	720-005-000	Seal	1	154Almag 35 Aluminum 155 or 156356-T6 Aluminum
24	860-011-150**	Tube, Casing	1	157Die Cast Aluminum Alloy #380
25	525-005-000	Motor	1	158Aluminum Alloy SR-319 159Anodized Aluminum
26	200-003-000	Clamp, Cable	1	162Brass, Yellow, Screw Machine Stock 165Cast Bronze, 85-5-5-5
27	706-007-330	Screw, Machine	1	166Bronze SAE 660
28	150-036-000	Power Cable Assembly Complete	1	170Bronze, Bearing Type, Oil Impregnated 180Copper Alloy
29	900-002-330	Washer, Lock	1	310Kynar Coated
				330Zinc Plated Steel 331Chrome Plated Steel
30	510-003-000	Lug, Compression	1	332Electroless Nickel Plated 335Galvanized Steel
31	240-001-000	Nut, Insulated Wire	1	336Zinc Plated Yellow Brass
For Mo		C3 and SPA15BSP3F, 12DC3: (Not 3)	Shown)	337Silver Plated Steel 340Nickel Plated
10	807-011-330	Stud	2	342Filled Nylon 354 Injection Moldad #203 40 September
	807-012-330	Stud (replaces 2 807-011-330)	2	354Injection Molded #203-40 Santoprene - Duro 40D ± 5; Color: RED
	325-001-330	Foot, Mounting	2	355Thermoplastic Elastomer 356Hytrel
	547-001-330	Stop Nut 5/16-18Vac	2	357Rupplon (Urethane Rubber) Color coded:PURPLE
	904-001-330	Washer	2	358Rupplon (Urethane Rubber) Color coded:PURPLE
Service	Items: (Not Show			(Some Applications, Compression Mold) 359Urethane Rubber
	475-220-000	Design Level 2 to Design Level 3		360Buna-N Rubber Color coded: RED
		Conversion Kit		361Buna-N 363Viton (Fluorel) Color coded: YELLOW
Dorto	dorling of any subject			364E.P.D.M. Rubber Color coded: BLUE
	derlined are only avai	365Neoprene Rubber Color coded: GREEN 366Nitrile, USDA Approved		
	at are boxed are not a	vailable for sale		368EPDM, USDA Approved List continued next page
* Typica				List continued nort page
** Items	10 & 24 available a	as a kit #475-132-000		

Website: www.springerpumps.com

Int'l: +001 267 404 2910

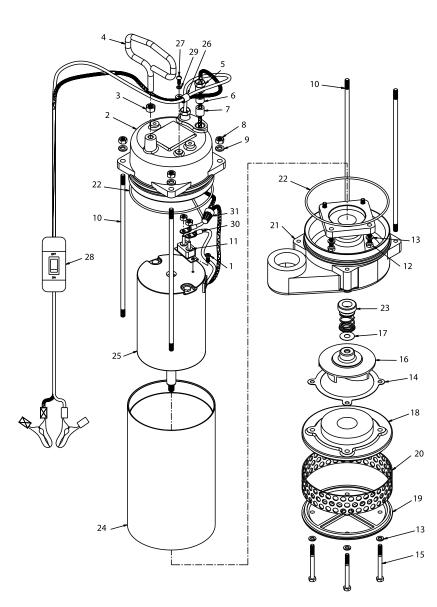

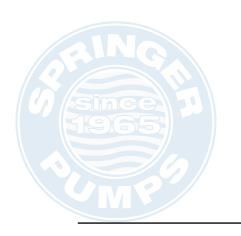

Model SPA1<sup>1</sup>/<sub>2</sub>-E and SPA40-E Design Level 3 Page 4

spa105dl3sm

Repair Parts shown in **bold face (darker)** type are more likely to need replacement after extended periods of normal use. They are readily available from most Warren Rupp distributors. The pump owner may prefer to maintain a limited inventory of these parts in his own stock to reduce repair downtime to a minimum.

**IMPORTANT:** When ordering repair parts always furnish pump model number, serial number and type number.

#### MATERIAL CODES The Last 3 Digits of Part Number

Continued from previous page 370...Butyl Rubber Color coded: BROWN 371...Philthane (Tuftane) 375...Fluorinated Nitrile 378...High density Polypropylene 405...Cellulose Fibre 408...Cork and Neoprene 425...Compressed Fibre 426...Blue Gard 440...Vegetable Fibre 465...Fibre 500...Delrin 500 501...Delrin 570 505...Acrylic Resin Plastic 520...Injection Molded PVDF Natural Color 540...Nylon 541...Nylon 542...Nylon 544...Nylon Injection Molded 550...Polyethylene 551...Polypropylene 552...Unfilled Polypropylene 553...Unfilled Polypropylene 555...Polyvinyl Chloride 570...Rulon II 580...Ryton 590...Valox 591...Nylatron G-S 592...Vijatron NSB 600...Virgin PTFE Tetrafluoroethylene (TFE) 601...Virgin PTFE (Bronze and moly filled) 602...Filled Virgin PTFE 603...Blue Gylon 604...Virgin PTFE 606...Virgin PTFE 610...Virgin PTFE Encapsulated Silicon 611...Virgin PTFE Encapsulated Viton Delrin, Viton and Hytrel are registered tradenames of E.I. DuPont. Gylon is a registered tradename of Garlock. Inc. Nylatron is a registered tradename of Polymer Corp.

Rulon II is a registered tradename of Dixion Industries Corporation.

Hastelloy-C is a registered tradename of Cabot Corp. Ryton is a registered tradename of Phillips Chemical Company.


Valox is a registered tradename of General Electric Company.

Rupplon, SandPIPER, PortaPump, Tranquilizer, SludgeMaster and Warren Rupp are tradenames of Warren Rupp, Inc.

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

# **INSTRUCTIONS FOR HANDLE CONVERSION**

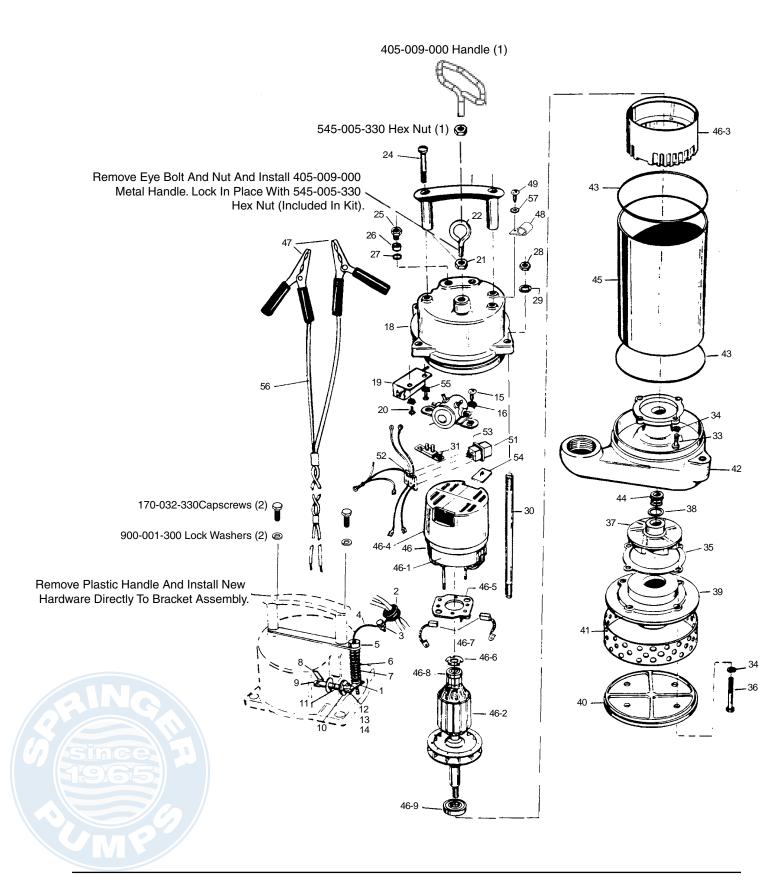

#### spa105dl3sm

Tel: 866-777-6060 Fax: 866-777-6383

#### Model SPA1<sup>1</sup>/<sub>2</sub>-E and SPA40-E Design Level 3 Page 5

Website: www.springerpumps.com Int'l: +001 267 404 2910

Springer Pumps, LLC