


PWR*FLO***[™] NPF80 3" METALLIC PUMP (CLAMPED)**

PWR-FLO™ AIR DISTRIBUTION SYSTEM

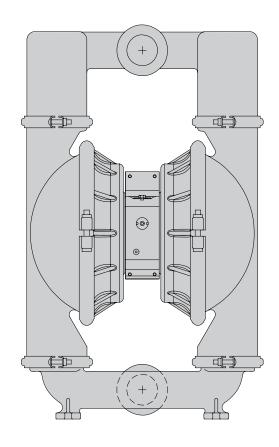

AIR-OPERATED 🕥 DOUBLE DIAPHRAGM 🗿 PUMPS

ALUMINUM Models DUCTILE IRON Models 316 STAINLESS STEEL Models



Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

N 🛈 M A D. **CAUTIONS - READ FIRST**

CAUTION: Do not apply compressed air to the exhaust port – pump will not function.


CAUTION: Do not over-lubricate air supply – excess B lubrication will reduce pump performance. Pump is pre-lubed.

TEMPERATURE LIMITS:

Neoprene -17.7°C to 93.3°C 0°F to 200°F -12.2°C to 82.2°C 10°F to 180°F Buna-N -15.1°C to 137.8°C -60°F to 280°F EPDM NOTE: Not all materials are available for all models. Refer to Section 2 for material options for your pump.

CAUTION: Check temperature limits for all wetted components. Example: Viton® has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).

CAUTION: Maximum temperature limit are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures.



CAUTION: Do not exceed 8.6 bar (125psig) air supply pressure.

CAUTION: The process fluid and cleaning fluids must be chemically compatible with all wetted pump components.



CAUTION: Do not exceed 82°C (180°F) air inlet temperature.



CAUTION: Pumps should be thoroughly flushed before installing into process lines.



CAUTION: Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.

CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.



CAUTION: Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipeline debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.

NOTE: When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure a tight fit. (See torgue specifications.)

NOTE: Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.



CAUTION: Tighten all hardware prior to installation.

Pump Designation System


N 🕑 M A D.

Г			1 2	_	3 4 5 6	_	7 8	9 	10	11 L	12 	13 		_	
	Air Distribution System	2	Liquid Port Size	3	Wetted Parts	7,8	Diaphragms & Valve Balls	9	Valve Seats	11	Fittings	12	Connections	13	AT
- 1	Nomad	07	07mm/.25″	A	Aluminum	BN	Buna - N/ Nitrile	A	Aluminum	N	NPT	(Clamped		
Ţ	Trans-Flo	15	15mm/.5″	W	Ductile	ND	Nordel/EPDM	S	Stainless Steel	В	BSP	В	Bolted		
G	Gold	25	25mm/1″	S	Stainless Steel	NE	Neoprene	BN	Buna - N/Nitrile	TC	Tri-Clamp				
PF	Pwr-Flo	40	40mm/1.5″	Р	Polypropylene	TF	PTFE (with Neoprene back-up)	NE	Neoprene	FL	Flanged				
)F	Dura-Flo	50	50mm/2″	4	Air Chambers	VT	Viton/FKM	ND	Nordel/EPDM						
		80	80mm/3″	A	Aluminum	FG	Hytrel®	VT	Viton	1					
		100	100mm/4″	W	Ductile	SN	Santoprene®	SP	Santoprene	1					
				S	Stainless Steel	SNF	Santoprene® - UFI	FG	Hytrel	1					
				W	Mild Steel	TFF	PTFE - UFI	Р	Polypropylene	1					
				Р	Polypropylene	TGN	Garlock [®] - NEO BACKED	К	Kynar	1					
				5	Center Block	TGE	Garlock [®] - EPDM BACKED	PU	Polyurethane	1					
				A	Aluminum	TGV	Garlock [®] - Viton BACKED	MTF	Mild Steel	1					
				Р	Polypropylene	PU	Polyurethane	10	0-Ring						
				6	Air Valve	FGF	Hytrel UFI	BN	Buna - N/Nitrile						
				B	Brass	PUF	Polyurethane UFI	NE	Neoprene	1					
				Р	Polypropylene			ND	Nordel/EPDM	1					
				A	Aluminum			VT	Viton						
					, uummum			TF	PTFE	1					
								PU	Polyurethane	ł					
									, ,						
								NIC							
								PTV	Viton Encap.						
		N	TG 50	/	AAAB	8 /	<u>TF / TF /</u>		Santoprene Viton Encap.	 /	/ [/]	X			
				_	3 4 5 6	_		Ļ		Ľ				-	
ľ	Air Distribution System	2	Liquid Port Size	3	Wetted Parts	7,8	Diaphragms & Valve Balls	9	Valve Seats	11	Fittings	12	Connections	13	ŀ
-1	Nomad	50	50mm/2"	A	Aluminum	TF	PTFE (with Buna back-up)	A	Aluminum	N	NPT	(19	~
	Trans-Flo			4	Air Chambers		,	10	0-Ring						
								TE		•					
5	Gold			A	Aluminum				PTFE						
_	Gold Pwr-Flo			A 5	Aluminum Center Block			11	PTFE						
2	Pwr-Flo			A 5 A	Center Block			IF	PTFE	J					
2				A 5 A	Center Block Aluminum			IF	PTFE	J					
F	Pwr-Flo Dura-Flo			A 5 A 6	Center Block Aluminum Air Valve			IF	PTFE	J					
1	Pwr-Flo Dura-Flo			A 5 A 6 B	Center Block Aluminum			IF	PTFE	J					

3

How It Works - Pump

The NOMAD diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

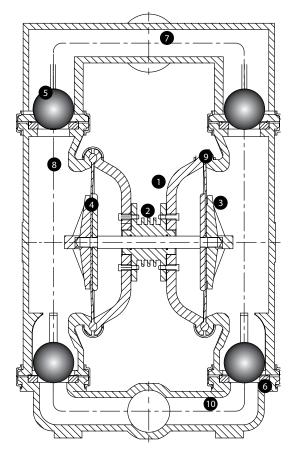

1. Air Chamber

The air chamber is the chamber that houses the air which powers the diaphragms.

N 🛈 M A D.

2. Air Distribution System

The air distribution system is the heart of the pump. The air distribution system is the mechanism that shifts the pump in order to create suction and discharge strokes.

3. Lock Nut (Outer Diaphragm Piston)

The outer diaphragm pistons provide a means to connect the diaphragms to the reciprocating common shaft and to seal the liquid side from the air side of the diaphragm.

4. Holding plate (Inner Diaphragm Piston)

The inner piston is located on the air side of the pump and does not come into contact with the process fluid.

5. Check Valve Ball

NOMAD air-operated pumps use suction and discharge check valves to produce directional flow of process fluid in the liquid chamber. The check valve balls seal and release on the check valve seats allowing for discharge and suction of process fluid to occur.

6. Check Valve Seat

The removable seats provide the ball valves a site to check.

7. Discharge Manifold

Process fluid exits the pump from the discharge port located on the discharge manifold at the top of the pump.

8. Liquid Chamber

The liquid chamber is filled with the process fluid during the suction stroke and is emptied during the discharge stroke. It is separated from the compressed air by the diaphragms.

9. Diaphragm

The diaphragm membrane provides for separation of the process fluid and the compressed air power source. To perform adequately, diaphragms should be of sufficient thickness and of appropriate material to prevent degradation or permeation in specific process fluid applications. TABLA offers a variety of diaphragm materials for your specific application requirements.

10. Inlet Manifold

Process fluid enters the pump from the intake port located on the inlet manifold at the bottom of the pump.

Troubleshooting

Pump will not run or runs slowly.

- 1. Ensure that the air inlet pressure is at least 0.4 Bar (5 psig) above start up pressure and that the differential pressure (the difference between air inlet and liquid discharge pressures) is not less than 0.7 Bar (10 psig).
- 2. Check air inlet filter for debris
- 3. Check for extreme air leakage (blow by) which would indicate worn seals/bores in the air valve.
- 4. Disassemble pump and check for obstructions in the air passageway.
- 5. Check for sticking ball check valves. If material being pumped is not compatible with pump, elastomer, swelling may occur. Replace ball check valves and seals with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.
- 6. Check for broken inner piston which will cause the air valve spool to be unable to shift.
- 7. Remove plug from pilot spool exhaust.

Pump runs but little or no product flows.

- 1. Check for pump cavitation; slow pump speed down to allow thick material to flow into liquid chambers.
- 2. Verify that vacuum required to lift is not greater than the vapor pressure of the material being pumped (cavitation).
- 3. Check for sticking ball valves. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seats with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.

Pump air valve freezes.

1. Check for excessive moisture in compressed air. Either install a dryer or hot air generator for compressed air. Alternatively, a coalescing filter may be used to remove the water from the compressed air in some applications.

Air bubbles in pump discharge.

- 1. Check for ruptured diaphragm.
- 2. Check tightness of outer pistons.
- 3. Check tightness of fasteners and integrity of o-rings and seals, especially at intake manifold.
- 4. Ensure pipe connections are airtight

Product comes out air exhaust.

- 1. Check for diaphragm rupture.
- 2. Check tightness of outer pistons to shaft.

N O M A D. Suggested Installation

INSTALLATION:

- Suction pipe equal to/greater than pump diameter (same for discharge)
- Tighten all fasteners before use
- Suction connection should be non-collapsible

AIR SUPPLY:

- Air line size must be large enough to create desired volume (see performance curve section)
- Do not exceed 8.6 BAR (125 PSIG)
- For best results, use 5 micron air filter
- Use lubricator with 5 wt. oil


PIPING:

- · Remove as many turns/elbows as possible
- Piping should be supported
- Flexible hose will avoid stress on pump fitting
- Gate Valve should be used in applications involving flooded suction
- In positive suction head conditions, limit inlet pressure to 0.5 - 0.7 BAR (7 - 10 PSI).
 Premature diaphragm failure will take place above the parameters.
- ALL NOMAD PUMPS ARE CAPABLE OF PASSING SOLIDS. A STRAINER SHOULD BE USED ON THE PUMP INTAKE TO ENSURE THAT THE PUMP'S RATED SOLIDS CAPACITY IS NOT EXCEEDED.
- CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE.



Suggested Installation

N 🕑 M A D.

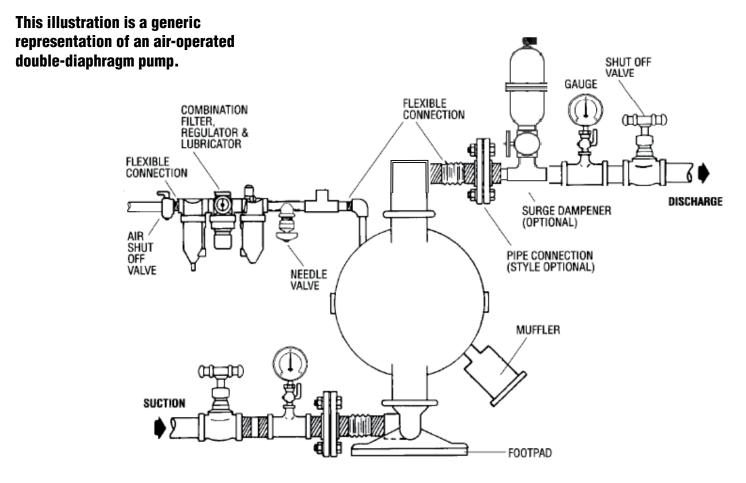

NOTE: In the event of a power failure, the shut off valve should be closed, if the restarting of the pump is not desirable once power is regained.


AIR OPERATED PUMPS: To stop the pump from operating in an emergency situation, simply shut off valve (user supplied) installed

in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. The shut off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.



NOMAD

Dimensional Drawings

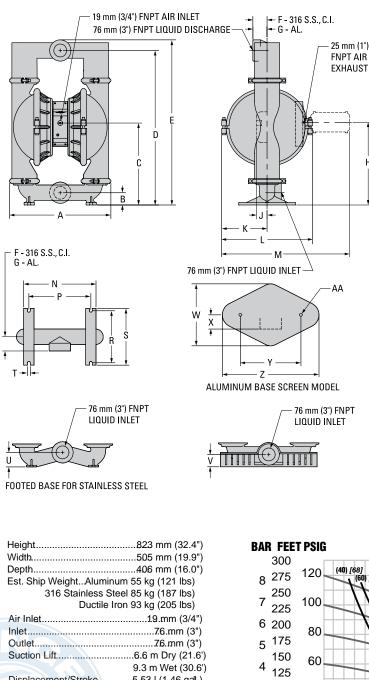

DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)			
A	505	19.9			
В	58	2.3			
C	386	15.2			
D	762	30.0			
E	823	32.4			
F	71	28			
G	84	3.3			
н	389	15.3			
J	48	1.9			
К	216	8.5			
L	427	16.8			
М	599	23.6			
N	363	14.3			
Р	307	12.1			
R	257	10.1			
S	282	11.1			
Т	18	0.7			
U	71	2.8			
V	69	2.7			
W	307	12.1			
Х	84	3.3			
Y	305	12.0			
Z	478	18.8			
AA	15 DIA.	.6 DIA.			


Width	505 mm (19.9")
Depth	406 mm (16.0")
Est. Ship WeightAlur	ninum 55 kg (121 lbs)
316 Stainless	s Steel 85 kg (187 lbs)
Ducti	le Iron 93 kg (205 lbs)
Air Inlet	1.9.mm (3/4")
Inlet	
Outlet	
Suction Lift	6.6 m Dry (21.6')
	9.3 m Wet (30.6')
Displacement/Stroke.	
Mary Elson Data	000 lam (040 and)

Max. Size Solids......9.5 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 68.1 lpm (18.0 gpm) against a discharge pressure head of 2.7 bar (40 psig) requires 4.1 bar (60 psig) and 1837 Nm /h (11 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

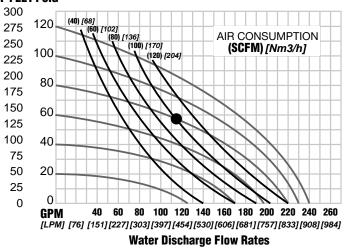

8 Tel: 866-777-6060 Fax: 866-777-6383

3

2

1

0

Parts Listing

Rubber-Fitted

No.	Part Description	Qty.	Aluminum	Stainless Steel	Ductile Iron	
1	Pro-Flo [®] Air Valve Assembly		N15-2010-20	N15-2010-20	N15-2010-20	
2	O-Ring (-235), End Cap		N71-1280-52	N71-1280-52	N71-1280-52	
3	End Cap, Pro-Flo®		N15-2332-20	N15-2332-20	N15-2332-20	
4	Screw, HHC, Air Vavle (7/16 -14 x 5 7/8")	6	N15-6001-03	N15-6001-03	N15-6001-03	
5	Muffler Plate, Pro-Flo®	1	N15-3181-20	N15-3181-20	N15-3181-20	
6	Gasket, Muffler Plate	1	N15-3505-52	N15-3505-52	N15-3505-52	
7	Gasket, Air Valve	1	N15-2615-52	N15-2615-52	N15-2615-52	
8	Center Block Assembly	1	N15-3110-01	N15-3110-01	N15-3110-01	
9	Removable Pilot Sleeve Assembly	1	N15-3880-99	N15-3880-99	N15-3880-99	
10	Pilot Spool Retaining O-Ring	2	N15-2650-49	N15-2650-49	N15-2650-49	
11	Center Block Shaft Seal		N15-3210-55-225	N15-3210-55-225	N15-3210-55-225	
12	12 Gasket Center Block, Pro-Flo®		N15-3525-52	N15-3525-52	N15-3525-52	
13	Air Chamber, Pro-Flo®	2	N15-3651-01	N15-3651-01	N15-3651-01	
14	Air Chamber Screw (3/8" - 16 x 1")	12	N15-6130-08	N15-6130-08	N15-6130-08	
15	Retaining Ring	2	N15-2651-03	N15-2651-03	N15-2651-03	
16	Shaft	1	N15-3805-09	N15-3805-09	N15-3805-09	
17	Washer, Inner Piston Back-Up	2	N15-6850-08	N15-6850-08	N15-6850-08	
18	Piston Inner	2	N15-3700-01	N15-3700-03	N15-3700-01	
19	Outer Piston Bolt (3/8" - 16 x 1-1/8")	12	N15-6130-08	N15-6130-08	N15-6130-08	
20	Washer, Flat	12	N15-6740-08-50	N15-6740-08-50	N15-6740-08-50	
21	Diaphragm	2	*N15-1010-51	*N15-1010-51	*N15-1010-51	
22	Piston Outer	2	N15-4550-01	N15-4550-03	N15-4550-02	
23	Valve Ball	4	*N15-1080-51	*N15-1080-51	*N15-1080-51	
24	Valve Seat	4	*N15-1120-51	*N15-1120-51	*N15-1120-51	
25	Liquid Chamber	2	N15-5000-01	N15-5000-03	N15-5000-02	
26	Discharge Manifold	1	N15-5021-01	N15-5021-03	N15-5021-02	
27	Inlet Housing for Footed Base		N15-5080-01	N15-5080-03	N15-5080-02	
28	8 Large Clamp Band Assembly		N15-7300-08	N15-7300-03	N15-7300-08	
29	Large Hex Bolt (1/2" - 13 x 3-1/2")	4	N15-6120-08	N15-6120-03	N15-6120-08	
30	Large Hex Nut (1/2" - 13)	4	N15-6420-08	N15-6420-03	N15-6420-08	
31	Small Clamp Band Assembly	4	N15-7100-08	N15-7100-03	N15-7100-08	
32	Small Hex Bolt (3/8" - 16 x 2-1/4")	8	N15-6050-08	N15-6050-03	N15-6050-08	
33	Small Hex Nut (3/8" - 16)	8	N15-6450-08	N15-6450-03	N15-6450-08	
	Muffler (not shown)	1	N15-3510-99	N15-3510-99	N15-3510-99	
	Washer Flat 1/4" (not shown)	8	N/A	N/A	N/A	
	Washer Flat 5/16" (not shown)	4	N/A	N/A	N/A	

*Consult Elastomar Options


SB - Screen Base Models (Aluminum Only)

	No.	Part Description	Qty.	Aluminum
	27	Inlet Manifold	1	N15-5080-01-30
	34	Screen Base	1	N15-5620-01
	35	Suction Hook-Up Cover	1	N15-5660-01
1	36	Hex Machine Screw (3/8" - 16 x 7/8")	1	N08-6140-08
	37	Hex Net (3/8" - 16)	2	N08-6450-08
	38	Hex Machine Screws (3/8" - 16 x 3")	2	N08-6120-08



Exploded View

Rubber-Fitted

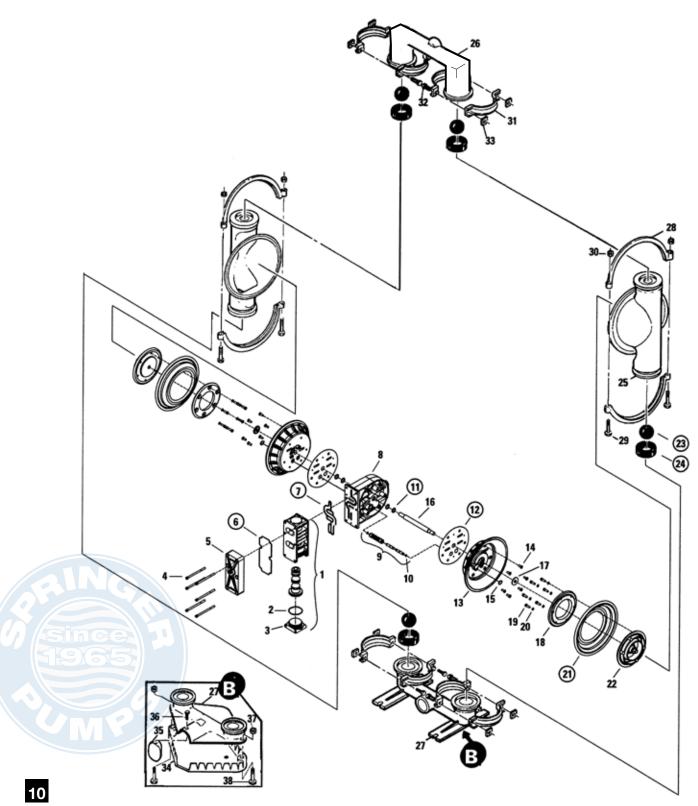

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Parts Listing

NOMAD

PTFE Diaphragm-Fitted


No.	Part Description	Qty.	Aluminum	Stainless Steel	Ductile Iron	
1	Pro-Flo [®] Air Valve Assembly		N15-2010-20	N15-2010-20	N15-2010-20	
2	O-Ring (-235), End Cap		N71-1280-52	N71-1280-52	N71-1280-52	
3	End Cap, Pro-Flo®		N15-2332-20	N15-2332-20	N15-2332-20	
4	Screw, HHC, Air Vavle (7/16 -14 x 5 7/8")		N15-6001-03	N15-6001-03	N15-6001-03	
5	Muffler Plate, Pro-Flo®	1	N15-3181-20	N15-3181-20	N15-3181-20	
6	Gasket, Muffler Plate	1	N15-3505-52	N15-3505-52	N15-3505-52	
7	Gasket, Air Valve	1	N15-2615-52	N15-2615-52	N15-2615-52	
8	Center Block Assembly	1	N15-3110-01	N15-3110-01	N15-3110-01	
9	Removable Pilot Sleeve Assembly	1	N15-3880-99	N15-3880-99	N15-3880-99	
10	Pilot Spool Retaining O-Ring	2	N15-2650-49	N15-2650-49	N15-2650-49	
11	11 Center Block Shaft Seal		N15-3210-55-225	N15-3210-55-225	N15-3210-55-225	
12	2 Gasket Center Block, Pro-Flo®		N15-3525-52	N15-3525-52	N15-3525-52	
13	Air Chamber, Pro-Flo®	2	N15-3651-01	N15-3651-01	N15-3651-01	
14	Air Chamber Screw (3/8" - 16 x 1")	12	N15-6130-08	N15-6130-08	N15-6130-08	
15	Retaining Ring	2	N15-2651-03	N15-2651-03	N15-2651-03	
16	Shaft	1	N15-3805-09	N15-3805-09	N15-3805-09	
17	Piston Inner	2	N15-3750-01	N15-3750-01	N15-3750-01	
18	Back-Up Diaphragm	2	*N15-1060-51	*N15-1060-51	*N15-1060-51	
19	Diaphragm	2	*N15-1010-55	*N15-1010-55	*N15-1010-55	
20	Piston Outer	2	N15-4600-03	N15-4600-03	N15-4600-03	
21	Valve Ball	4	*N15-1080-55	*N15-1080-55	*N15-1080-55	
22	Valve Seat	4	N15-1121-01	N15-1121-03	N15-1121-08	
23	PTFE Valve Seat O-Ring		*N15-1200-55	*N15-1200-55	*N15-1200-55	
24	Liquid Chamber	2	N15-5000-01	N15-5000-03	N15-5000-02	
25	Discharge Manifold	1	N15-5021-01	N15-5021-03	N15-5021-02	
26	Inlet Manifold	1	N15-5080-01	N15-5080-03	N15-5080-02	
27	Large Clamp Band Assembly	2	N15-7300-03	N15-7300-03	N15-7300-03	
28	Large Hex Bolt (1/2" - 13 x 3-1/2")	4	N15-6120-03	N15-6120-03	N15-6120-03	
29	Large Hex Nut (1/2" - 13")	4	N15-6420-03	N15-6420-03	N15-6420-03	
30	Small Clamp Band Assembly	2	N15-7100-03	N15-7100-03	N15-7100-03	
31	Small Clamp Carriage Bolt (3/8" - 16 x 2")	8	N15-6050-03	N15-6050-03	N15-6050-03	
32	Small Hex Nut (3/8" - 16")	8	N08-6450-03	N08-6450-03	N08-6450-03	
	Muffler (not shown)	1	N15-3510-99	N15-3510-99	N15-3510-99	
	Washer Flat 1/4" (not shown)	8	N/A	N/A	N/A	
	Washer Flat 5/16" (not shown)	8	N/A	N/A	N/A	

*Consult Elastomar Options

11



PTFE Diaphragm-Fitted

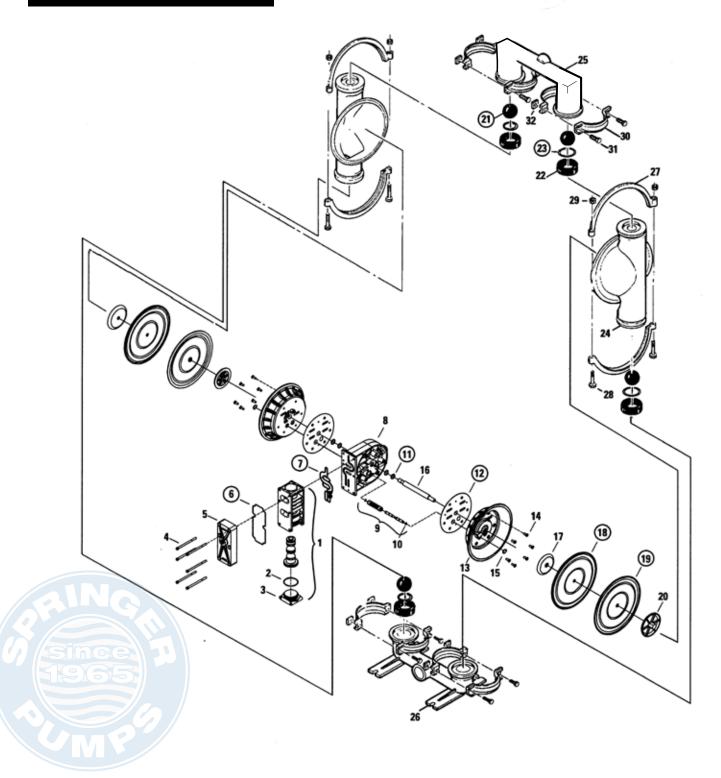



1645 W. Park Ave., Suite 200 Redlands, CA USA 92373 (909) 798-9532





Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC