## **SERVICE & OPERATING MANUAL**

## **Original Instructions**

#### **Certified Quality**



SAI GLOBAL ISO 9001 Certified ISO 14001 Certified

Hydraulic


# EAC

Warren Rupp, Inc. A Unit of IDEX Corporation 800 N. Main St., Mansfield, Ohio 44902 USA Telephone (419) 524.8388 Fax (419) 522.7867 SANDPIPERPUMP.COM



©2017 Warren Rupp, Inc.

## **EH2-M** Heavy Duty - High Pressure Design Level 4

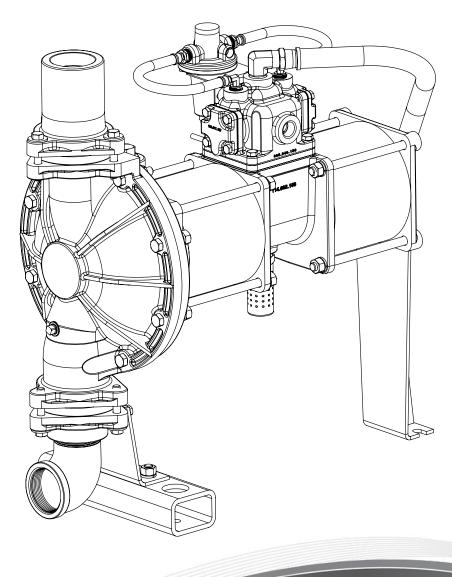



2: INSTAL & OP

1: PUMP SPECS

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

## **Safety Information**

## IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

## 



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.




#### <u>WARNING</u>

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

## RECYCLING

Many components of SANDPIPER® AODD pumps are made of recyclable materials. We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed.

## **Grounding ATEX Pumps**

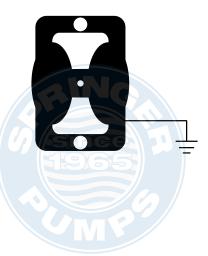

ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes. Pumps equipped with electrically conductive diaphragms are suitable for the transfer of conductive or non-conductive fluids of any explosion group. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN 13463-1: 2009 section 6.7.5 table 9, the following protection methods must be applied:

- · Equipment is always used to transfer electrically conductive fluids or
- · Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running

For further guidance on ATEX applications, please consult the factory.

## 



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

#### Model EH2-M

SANDPIPERPUMP.COM

eh2mdl4sm-rev1117



Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

## **Table of Contents**

#### SECTION 1: PUMP SPECIFICATIONS......1

- Explanation of Nomenclature
- Performance
- Materials
- Dimensional Drawings

#### SECTION 2: INSTALLATION & OPERATION......5

- Principle of Pump Operation
- Recommended Installation Guide
- Troubleshooting Guide

#### 

- Composite Repair Parts Drawing
- Composite Repair Parts List
- Down Ported Option Drawing
- Material Codes

#### SECTION 4: AIR END.....12

- Air Distribution Valve Assembly
- Pilot Valve Assembly

#### SECTION 5: WET END .....14

Diaphragm Servicing

#### **SECTION 7: WARRANTY & CERTIFICATES ....15**

- Warranty
- CE Declaration of Conformity Machinery
- ATEX Declaration of Conformity







SANDPIPERPUMP.COM eh2mdl4sm-rev1117

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

Model EH2-M

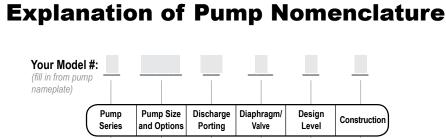



**Pump Series** EH High Pressure

**Pump Size & Options** 

2 2" **Discharge Porting Position** 

Т Тор

I: PUMP SPECS

#### **Diaphragm Check Valve Ma**terials

B Nitrile

FKM with PTFE С

GN Neoprene Backup with PTFE Overlay

and PTFE Check Balls

GS Santoprene Backup with PTFE overlay



Neoprene Santoprene s v

FKM (Stainless Wetted Only)

Х

#### **Design Level**

#### 4 Construction

L. Cast Iron Wetted s Stainless

Your Serial #: (fill in from pump nameplate)

## **ATEX Detail**

|      | ATEX Detail                  | Construction | Options |
|------|------------------------------|--------------|---------|
| (Ex) | II 2G c T5<br>II 2D c T100°C | I,S          | N/A     |



#### 1 · Model EH2-M


Tel: 866-777-6060 Fax: 866-777-6383 SANDPIPERPUMP.COM




eh2mdl4sm-rev1117

Website: www.springerpumps.com Int'l: +001 267 404 2910

Springer Pumps, LLC

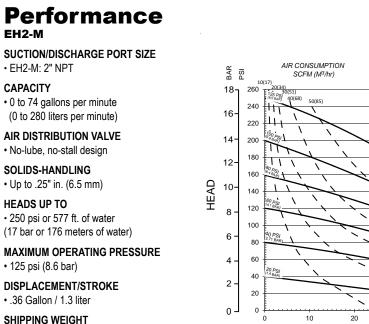

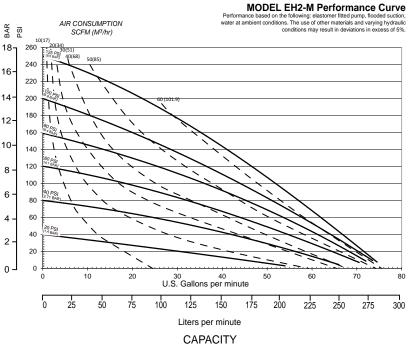

## **Materials**

· Cast Iron 172lbs. (78kg)

Stainless Steel 176 lbs. (80kg)

| Material Profile:   |                | rating<br>ratures: | <b>Polypropylene:</b> A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by   | 180°F<br>82°C  | 32<br>0  |
|---|----------------|--------------------|--|----------------|----------|
| <b>CAUTION!</b> Operating temperature limitations are as follows:   | Max.           | Min.               | chlorine, fuming nitric acid and other strong oxidizing agents.  |                |          |
| <b>Conductive Acetal:</b> Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing | 190°F<br>88°C  | -20°F<br>-29°C     | <b>PVDF:</b> (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.   | 250°F<br>121°C | 0<br>-18 |
| agents.   |                |                    | Santoprene®: Injection molded thermoplastic elastomer with   | 275°F          | -4       |
| EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and   | 280°F<br>138°C | -40°F<br>-40°C     | no fabric layer. Long mechanical flex life. Excellent abrasion resistance.   | 135°C          | -4       |
| alcohols.   | 100 0          | -40 0              | UHMW PE: A thermoplastic that is highly resistant to a broad   | 180°F          | -3       |
| FKM: (Fluorocarbon) Shows good resistance to a wide range   | 350°F          | -40°F              | range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.  | 82°C           | -3       |
| of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils.  | 177°C          | -40°C              | Urethane: Shows good resistance to abrasives. Has poor   | 150°F          | 3        |
| Hot water or hot aqueous solutions (over 70°F(21°C)) will   |                |                    | resistance to most solvents and oils.  | 66°C           |          |
| attack FKM.   |                |                    | Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious.   | 220°F          | -3       |
| Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.  | 220°F<br>104°C | -20°F<br>-29°C     | Very few chemicals are known to chemically react with PTFE;<br>molten alkali metals, turbulent liquid or gaseous fluorine and  | 104°C          | -3       |
| Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many   | 200°F<br>93°C  | -10°F<br>-23°C     | a few fluoro-chemicals such as chlorine trifluoride or oxygen<br>difluoride which readily liberate free fluorine at elevated<br>temperatures.  |                |          |
| oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.  |                |                    | Maximum and Minimum Temperatures are the limits for which these ma<br>Temperatures coupled with pressure affect the longevity of diaphragm p<br>Maximum life should not be expected at the extreme limits of the tempe | pump compoi    | nents.   |
| Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with   | 190°F<br>88°C  | -10°F<br>-23°C     | Metals:  |                |          |
| highly polar solvents like acetone and MEK, ozone, chlorinated  | 00 0           | -23 C              | Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.  |                |          |
| hydrocarbons and nitro hydrocarbons.  |                |                    | Stainless Steel: Equal to or exceeding ASTM specification A743   | CF-8M for c    | orrosi   |
| Nylon: 6/6 High strength and toughness over a wide<br>temperature range. Moderate to good resistance to fuels, oils<br>and chemicals.   | 180°F<br>82°C  | 32°F<br>0°C        | resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump ind  |                |          |

Process temperature range: -20°C to +80°C for models rated as category 1 equipment

-20°C to +100°C for models rated as category 2 equipment

In addition, the ambient temperature range and the process temperature range do not exceed the operating temperature range of the applied non-metallic parts as listed in the manuals of the pumps.




SANDPIPERPUMP.COM eh2mdl4sm-rev1117

Tel: 866-777-6060 Fax: 866-777-6383


Springer Pumps, LLC

## **Dimensional Drawings**

**EH2-M, Cast Iron Wetted** Dimensions are ± .13" (3mm). Figures in parenthesis = millimeters

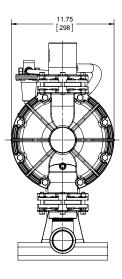


**1: PUMP SPECS** 

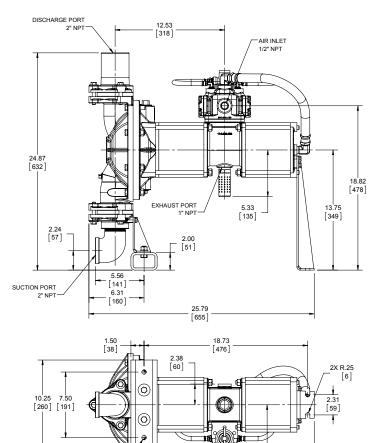

2X Ø.50 [13]

5.37 [136]

20.98 [533]





#### 3 · Model EH2-M


SANDPIPER SANDPIPERPUMP.COM eh2mdl4sm-rev1117


Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC


## **Dimensional Drawings**

#### EH2-M, Stainless Wetted

Dimensions are  $\pm$  .13" (3mm). Figures in parenthesis = millimeters

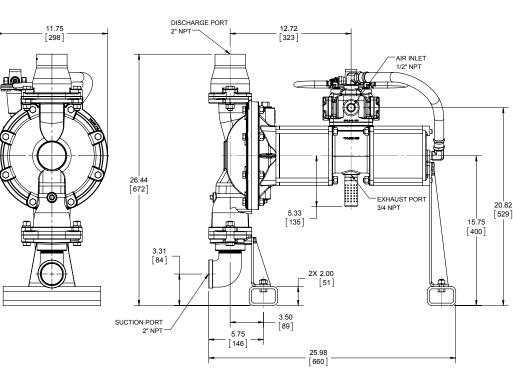

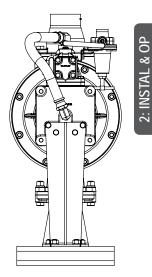

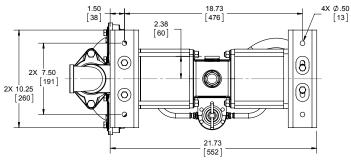





Fax: 866-777-6383

SANDPIPERPUMP.COM

н RUPP,INC, BRAND ch2mdl4sm-rev1117 Tel: 866-777-6060

Springer Pumps, LLC

Model EH2-M • 4 Website: www.springerpumps.com

Int'l: +001 267 404 2910

## **Principle of Pump Operation**

#### PRINCIPLE OF OPERATION

This pump is a 2:1 pressure ratio single acting pump powered by compressed air. The 2:1 ratio is achieved by simultaneously applying air pressure over a single end of each of two pistons connected in series by a shaft. The two pressurized ends are those most distant from the pumped fluid, with the force from the air pressure exerted in the direction of the pumped fluid. The combined force is transferred through to the single end of the piston nearer to the pumped fluid—the single piston end having an area equal to one-half that of the two "air" ends—and then through a fluid cell to a single pumping diaphragm.

On this single acting pump the suction stroke is independent of all discharge conditions and requires less air pressure than the discharge stroke. The suction stroke is accomplished through an air regulator which pressurizes the piston area in the rear cylinder adjacent to the intermediate bracket, while simultaneously exhausting the other two piston areas: one in the front cylinder, adjacent to the intermediate bracket, and the other behind the rear cylinder piston, adjacent to the cap end.

#### OPERATION

The regulator is factory preset to 30 psi. After the pump is installed and in operation, the operator should raise or lower the setting until maximum performance is determined by trial and error. A setting which is too high will result in excessively rapid and noisy operation, with a loss in performance and eventually shortened pump life. The hose assemblies deliver air to the non-wetted portions of the pump, and care should be taken that they are neither crimped nor cut.

#### INSTALLATION PROCEDURES

Position the pump as close as possible to the source of the liquid to be pumped. Avoid long or undersize suction lines and use the minimum number of fittings. For permanent installation involving rigid piping, install short flexible sections of hose between the pump and piping. This reduces strains and permits easier removal of the pump for service when required.

#### **AIR SUPPLY**

Do not connect the unit to an air supply in excess of 125 PSI (8.61 bars). Install a shutoff valve in the air supply line to permit removal of the unit for servicing. When connecting an air supply of rigid piping, mount a section of flexible line to the pump to eliminate piping strain. In permanent installations, an air-line filter is recommended.

#### FREEZING OR ICING OF EXHAUST

lcing of the air exhaust can occur under certain conditions of temperature and humidity on compressed air power equipment. Icing is more likely to occur at high discharge pressures. Use of the Warren Rupp Air Dryer should eliminate the problem.

#### **MAINTENANCE AFTER USE**

When the pump is used for materials that tend to settle out or transform from liquid to solid form, care must be taken after each use or during idle time to remove them and flush the pump as required to prevent damage. In freezing temperatures the pump must be completely drained when idle. This model must be tilted to allow the liquid from the chambers to run out of the discharge port.



#### 5 · Model EH2-M

SANDPIPERPUMP.COM

eh2mdl4sm-rev1117



Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

## **Troubleshooting Guide**

#### **TROUBLE SHOOTING**

#### 1. Pump will not cycle

- A. Check to make sure the unit has enough pressure to operate and that the air inlet valve is open.
- B. Check the discharge line to insure that the discharge line is neither closed nor blocked.
- C. If the spool in the air distribution valve is not shifting check the main spool. It must slide freely.
- D. Excessive air leakage in the pump can prevent cycling. Air leakage from the exhaust port indicates leakage in the air distribution valve. See further service instructions.
- E. Blockage in the liquid chamber can impede movement of diaphragm.

#### 2. Pump cycles but will not pump

- A. Suction side of pump pulling in air. Check the suction line for air leaks and be sure that the end of the suction line is submerged. Check flange bolting. Check valve flanges and manifolds to chamber flange joints.
- B. Make certain the suction line or strainer is not plugged. Restriction at the suction is indicated by a high vacuum reading when a vacuum gauge is installed in the suction line.
- C. Check valves may not be seating properly. To check, remove the suction line and cover the suction port with your hand. If the unit does not pull a good suction (vacuum), the check valves should be inspected for proper seating.
- D. Static suction life may be too high. Priming can be improved by elevating the suction and discharge lines higher than the check valves and pouring liquid into the unit through the suction inlet. When priming at high suction lifts or with long suction lines operate the pump at maximum cycle rate.

#### 3. Low performance

- A. Capacity is reduced as the discharge pressure increases. Performance capability varies with available inlet supply. Check air pressure at the pump inlet when the pump is operating to make certain that adequate air supply is maintained.
- B. Check vacuum at the pump suction. Capacity is reduced as vacuum increases. Reduced flow rate due to starved suction will be evident when cycle rate can be varied without change in capacity. This condition will be more prevalent when pumping viscous liquids. When pumping thick, heavy material the suction line must be kept as large in diameter and as short as possible, to keep suction loss minimal.
- C. Low flow rate and slow cycling rate indicate restricted flow through the discharge line. Low flow rate and fast cycling rate indicate restriction in the suction line or air leakage into suction. For more information, refer to the Warren Rupp Troubleshooting Guide.

**WARRANTY:** This unit is guaranteed for a period of five years against defective material and workmanship. For high pressure pumps used in conjunction with another diaphragm pump in "skid mount" system: The EH2-M will not prime against the head created by the fill pump. Run both simultaneously at start-up.

#### **RECOMMENDED WARREN RUPP® ACCESSORIES** TO MAXIMIZE PUMP PERFORMANCE:

- Tranquilizer® Surge Suppressor. For nearly pulse-free flow.
- Warren Rupp Air Dryer. For clean, dry compressed air.
- Warren Rupp Filter/Regulator. For modular installation and service convenience.
- Warren Rupp Speed Control. For manual or programmable process control. Manual adjustment or 4-20mA reception.
- For more detailed information on these accessories, contact your local

Warren Rupp Factory-Authorized Distributor, or Warren Rupp corporate headquarters.

6 • Model EH2-M


SANDPIPERPUMP.COM

eh2mdl4sm-rev1117



Springer Pumps, LLC

## **Composite Repair Parts Drawing-Cast Iron**

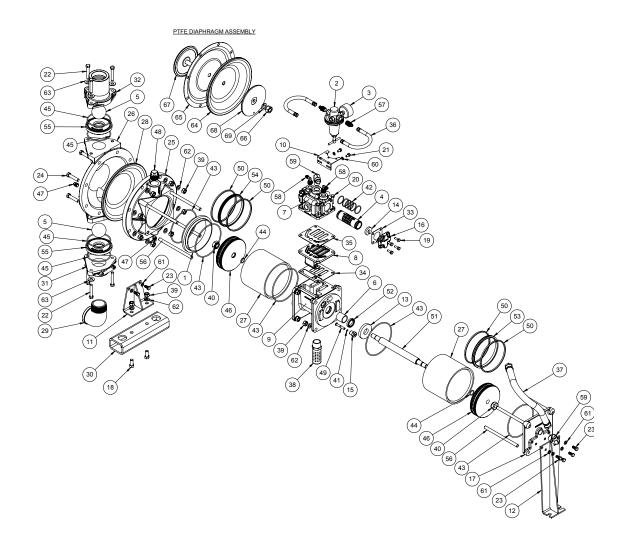

## Service & Repair Kits-Cast Iron Wetted

| 476.247.000 | Air End Kit<br>Sleeve and Spool Set, O-rings, Bumpers, U-Cup Seals,<br>and Gaskets, and pilot valve assembly | 476.048.644 | Wet End Kit<br>FKM diaphragm, PTFE check balls, PTFE o-rings and<br>carbon steel seats                          |
|-------------|--|-------------|---|
| 476.048.360 | Wet End Kit<br>Buna diaphragm, Buna check balls, Buna o-rings and<br>carbon steel seats                      | 476.048.635 | PTFE Encapsulated O-rings, EPDM Wear Pads<br>Wet End Kit<br>Neoprene backup diaphragm, PTFE Overlay, PTFE check |
| 476.048.363 | Wet End Kit<br>FKM diaphragm, FKM check balls, PTFE o-rings and<br>carbon steel seats                        |             | balls, Buna o-rings and carbon steel seats  |
| 476.048.364 | Wet End Kit<br>EPDM diaphragm, EPDM check balls, PTFE o-rings and<br>carbon steel seats                      |             |   |
| 476.048.365 | Wet End Kit<br>Neoprene diaphragm, Neoprene check balls, Buna o-<br>rings and carbon steel seats             |             |   |



3: EXP VIEW

## SANDPIPER

SANDPIPERPUMP.COM eh2mdl4sm-rev1117

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

Model EH2-M • 7

## **Composite Repair Parts List-Cast Iron Wetted**

| ltem                 | Part Number                | Description  | Qty.     |      |               |   |
|----------------------|----------------------------|--|----------|------|---------------|---|
| 1                    | 008.013.080                | Adapter  | <u> </u> | 42   | 560.022.360   | O-ring                                  |
| 2                    | 020.008.000                | Regulator (Includes Item #3)                                 | 1        | 44   | 560.076.360   | O-ring                                  |
| 3                    | 020.054.000                | Gauge, Pressure (Included with item #2)                      | 1        | 45   | 560.079.360   | O-ring - Buna Nitrile                   |
|                      | 031.012.000                | Sleeve and Spool Set   | 1        | —    | 560.079.611   | O-ring - PTFE Encapsulated              |
| <b>4</b><br>5        | 050.005.354                | Ball, Check - Santoprene                                     | 2        | 46   | 605.012.151   | Piston                                  |
|                      | 050.005.360W               | Ball, Check - Buna Nitrile                                   | 2        | 47   | 618.003.330   | Plug, NPT 1/4" (Included with item #25) |
|                      | 050.005.363                | Ball, Check - FKM  | 2        | 48   | 618.007.330   | Plug, NPT 1"                            |
|                      | 050.005.364                | Ball, Check - EPDM   | 2        | 49   | 620.011.114   | Plunger, Actuator                       |
|                      | 050.005.365W               | Ball, Check - Neoprene                                       | 2        | 50   | 677.001.542   | Ring, Wear                              |
|                      | 050.010.600                | Ball, Check - PTFE   | 2        | 51   | 685.043.120   | Rod, Connecting                         |
| 6                    | 070.006.170H               | Bearing, Sleeve (Included with item #9)                      | 2        | 52   | 720.004.360   | Seal, U-Cup                             |
| 7                    | 095.040.156                | Body, Valve  | 1        | 53   | 720.022.360   | Seal, T Assembly with Backup Rings      |
| 8                    | 095.073.001                | Pilot Valve Assy   | 1        | 54   | 720.034.000   | Seal, PSP Assembly with Energizer Ring  |
| 9                    | 114.002.156 H              | Intermediate (Includes item #6)                              | 1        | (55) | 722.042.080   | Seat, Check Valve (Cast Iron Wetted)    |
| 10                   | 115.045.000                | Bracket, Regulator (Included with item #2)                   | 1        | 56   | 807.047.080   | Stud                                    |
| 11                   | 115.064.080                | Bracket, Mounting (Cast Iron Wetted)                         | 1        | 57   | 866.025.162   | Connector, Male                         |
| 12                   | 115.067.080                | Bracket, Mounting  |          | 58   | 866.040.162   | Fitting, Male 90° Elbow                 |
| 13                   | 132.002.360                | Bumper, Diaphragm  | 2        | 59   | 866.041.162   | Fitting, Male 90° Elbow                 |
| 1                    | 132.014.358                | Bumper, Air Valve  | 2        | 60   | 900.001.330   | Washer, Lock 1/4"                       |
| 15                   | 135.016.162                | Bushing, Threaded  | 2        | 61   | 900.004.330   | Washer, Lock 5/16"                      |
| 16                   | 165.011.157                | Cap, End   | 2        | 62   | 900.006.330   | Washer, Lock 7/16" (Cast Iron Wetted)   |
| 17                   | 165.047.010                | Cap, Cylinder  | 1        | 63   | 901.005.330   | Washer, Flat 1/2"                       |
| 18                   | 170.024.330                | Capscrew, Hex-Hd 7/16-14 x 1 (Cast Iron We                   | etted) 2 |      |               |   |
|                      |                            |  |          |      | E Diaphragm A |   |
| 19                   | 170.032.330                | Capscrew, Hx-Hd 1/4-20 x 3/4                                 | 8        | 64   | 286.005.365   | Diaphragm                               |
| 20                   | 170.045.330                | Capscrew, Hx-Hd 5/16-18 x 1.25                               | 4        | 65   | 286.020.604   | Diaphragm, Overlay                      |
| 21                   | 170.050.330                | Capscrew, Hx-Hd 1/4-20 x 1/2                                 | 2        | 66   | 545.009.330   | Nut, Hex 5/8-11                         |
| 22                   | 170.052.330                | Capscrew, Hx-Hd 3/8-16 x 2.25 (Cast Iron W                   | etted)6  | 67   | 612.039.010   | Plate, Outer Diaphragm (Includes stud)  |
|                      | (=0.0==.000                |  |          | 68   | 612.047.330   | Plate, Inner Diaphragm                  |
| 23                   | 170.057.330                | Capscrew, Hx-Hd 5/16-18 X .75                                | 6        | 69   | 900.007.330   | Washer, Lock 5/8"                       |
| 24                   | 170.060.330                | Capscrew, Hx-Hd 7/16-14 x 2.00                               | 8        |      |               |   |
| 25                   | 196.029.015                | Chamber, Inner (Includes item #47)                           | 1        |      |               |   |
| 26                   | 196.053.010                | Chamber, Outer (Cast Iron Wetted)                            | 1        |      |               |   |
| 27                   | 275.009.331                | Cylinder   | 2        |      |               |   |
| 28                   | 286.036.354                | Diaphragm - Santoprene                                       | 1        |      |               |   |
|                      | 286.036.360                | Diaphragm - Buna   | 1        |      |               |   |
|                      | 286.036.363                | Diaphragm - FKM  | 1        |      |               |   |
|                      | 286.036.364                | Diaphragm - EPDM   | 1        |      |               |   |
| 29                   | 286.036.365<br>312.046.020 | Diaphragm - Neoprene<br>Elbow, 90° Street (Cast Iron Wetted) | 1        |      |               |   |
| 29<br>30             | 326.003.080                | Foot, Mounting   | 1        |      |               |   |
| 30<br>31             | 334.038.010                | Flange, Suction (Cast Iron Wetted)                           | 1        |      |               |   |
|                      | 334.039.010                | Flange, Discharge (Cast Iron Wetted)                         | 1        |      |               |   |
| 32<br>33<br>33<br>35 | 360.010.425                | Gasket, End Cap  | 2        |      |               |   |
| ã                    | 360.041.379                | Gasket, Air Valve  | 1        |      |               |   |
| Š                    | 360.048.425                | Gasket, Air Valve  | 1        |      |               |   |
| 36                   | 426.009.000                | Hose, Assembly   | 2        |      |               |   |
| 37                   | 426.015.000                | Hose, Assembly   | 1        |      |               |   |
| 38                   | 530.033.000                | Muffler  | 1        |      |               |   |
| 39                   | 545.007.330                | Nut, Hex 7/16-14 (Cast Iron Wetted)                          | 18       |      |               |   |
| 40                   | 547.009.080                | Nut, Sealing   | 2        |      |               |   |
|                      | 560.001.360                | O-ring   | 2        |      |               |   |
| (41)<br>(42)         | 560.020.360                | O-ring   | 6        |      |               |   |
| 17/2                 |                            |  |          |      |               |   |

#### LEGEND:

O= Items contained within Air End Kits

= Items contianed within Wet End Kits

\* Air End Kit only includes sleeve and spool set, not entire air valve assembly

Note: Kits contain components specific to the material codes.



SANDPIPERPUMP.COM eh2mdl4sm-rev1117


Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

Model EH2-M • 8

3: EXP VIEW

## **Composite Repair Parts Drawing-Stainless**

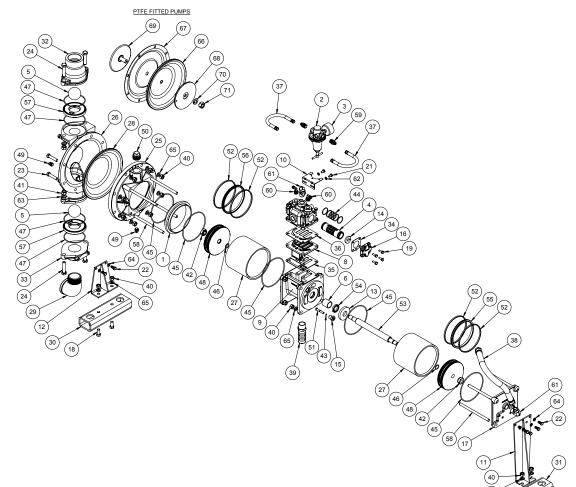

## Service & Repair Kits-Stainless Wetted

| 476.247.000 | Air End Kit  |
|-------------|--|
|             | Sleeve and Spool Set, O-rings, Bumpers, U-Cup Seals, and Gaskets, and pilot valve assembly |
| 476.056.360 | Wet End Kit  |
|             | Buna diaphragm, Buna check balls, Buna o-rings and<br>stainless steel seats                |
| 476.056.364 | Wet End Kit  |
|             | EPDM diaphragm, EPDM check balls, PTFE o-rings and   |
|             | stainless steel seats  |
| 476.056.365 | Wet End Kit  |
|             | Neoprene diaphragm, Neoprene check balls, Nitrile orings<br>and stainless steel seats      |
| 476.056.633 | Wet End Kit  |
|             | FKM diaphragm, FKM check balls, PTFE o-rings and carbon steel seats                        |
| 476.056.635 | Wet End Kit  |
|             | Neoprene backup diaphragm, PTFE Overlay, PTFE  |
|             | check balls, PTFE seals and stainless steel seats  |
| 476.056.649 | Wet End Kit  |
|             | Buna backup diaphragm, PTFE Overlay, PTFE  |
|             | check balls, PTFE seals and stainless steel seats  |



SANDPIPERPUMP.COM

eh2mdl4sm-rev1117

Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

Model EH2-M • 9

## **Composite Repair Parts List-Stainless** Qty.

2

| ltem     | Part Number                | Description   | C |
|----------|----------------------------|---|---|
| 1        | 008.013.080                | Adapter   |   |
| 2        | 020.008.000                | Regulator (Includes Item #3)  |   |
| 3        | 020.054.000                | Gauge, Pressure (Included with item #2)                                   |   |
| Å        | 031.012.000                | Sleeve and Spool Set  |   |
| 5        | 050.017.354                | Ball, Check - Santoprene  |   |
|          | 050.017.360 W              | Ball, Check - Buna Nitrile  |   |
|          | 050.017.364 W              | Ball, Check - EPDM  |   |
|          | 050.017.365 W              | Ball, Check - Neoprene  |   |
|          | 050.018.600                | Ball, Check - PTFE  |   |
| 6        | 070.006.170H               |   |   |
| 7        | 095.040.156                | Bearing, Sleeve (Included with item #9)<br>Body, Valve                    |   |
| 8        | 095.073.001                | Pilot Valve Assy  |   |
| 9        | 114.002.156 H              | Intermediate (Includes item #6)   |   |
| 9<br>10  | 115.045.000                | Bracket, Regulator (Includes item #0)                                     |   |
| 10       | 115.067.080                |   |   |
| 12       | 115.072.000                | Bracket, Mounting<br>Bracket, Mounting (Stainless Wetted)                 |   |
| 12       |                            |   |   |
| 13       | 132.002.360<br>132.014.358 | Bumper, Diaphragm   |   |
|          | 135.016.162                | Bumper, Air Valve   |   |
| 16       |                            | Bushing, Threaded   |   |
| 16<br>17 | 165.011.157                | Cap, End  |   |
| 17<br>19 | 165.047.010                | Cap, Cylinder   |   |
| 18       | 170.024.330                | Capscrew, Hex-Hd 7/16-14 x 1  |   |
| 10       | 170 022 220                | (Stainless Wetted)  |   |
| 19<br>20 | 170.032.330                | Capscrew, Hx-Hd 1/4-20 x 3/4  |   |
| 20       | 170.045.330                | Capscrew, Hx-Hd 5/16-18 x 1.25  |   |
| 21       | 170.050.330                | Capscrew, Hx-Hd 1/4-20 x 1/2  |   |
| 22       | 170.057.330                | Capscrew, Hx-Hd 5/16-18 X .75   |   |
| 23       | 170.060.330                | Capscrew, Hx-Hd 7/16-14 x 2.00  |   |
| 24<br>25 | 170.066.330                | Capscrew, Hx-Hd 1/2-13 x 2.25   |   |
| 25<br>26 | 196.029.015                | Chamber, Inner (Includes item #47)  |   |
| 20<br>27 | 196.047.110                | Chamber, Outer (Stainless Wetted)   |   |
| 28       | 275.009.331                | Cylinder  |   |
| 20       | 286.036.354                | Diaphragm - Santoprene  |   |
|          | 286.036.360                | Diaphragm - Buna  |   |
|          | 286.036.363                | Diaphragm - FKM   |   |
|          | 286.036.364                | Diaphragm - EPDM  |   |
| 29       | 286.036.365                | Diaphragm - Neoprene<br>Elbow, 90° Street (Cast Iron Wetted)              |   |
| 29<br>30 | 312.046.110                |   |   |
| 31       | 326.003.080<br>326.006.080 | Foot, Mounting<br>Foot, Mounting  |   |
| 32       | 334.043.110                | Flange, Discharge (Stainless Wetted)                                      |   |
| 33       | 334.044.110                | Flange, Suction (Stainless Wetted)  |   |
| 34       | 360.010.425                | Gasket, End Cap   |   |
|          | 360.041.379                | Gasket, Air Valve   |   |
| Š        | 360.048.425                | Gasket, Air Valve   |   |
| 37       | 426.009.000                | Hose, Assembly  |   |
| 38       | 426.015.000                | Hose, Assembly  |   |
| 39       | 530.033.000                | Muffler   |   |
| 39<br>40 |                            |   |   |
| 40       | 545.007.330<br>545.008.330 | Nut, Hex 7/16-14 (Stainless Wetted)<br>Nut, Hex 1/2-13 (Stianless Wetted) |   |
| 41<br>42 | 545.008.330                | Nut, Hex 1/2-13 (Stianless Wetted)<br>Nut, Sealing                        |   |
| 42       | 560.001.360                | O-ring  |   |
| A A      | 560.001.360                | O-ring  |   |
| 44       | 300.020.300                | Oning   |   |
|          |                            |   |   |

O= Items contained within Air End Kits

Items contianed within Wet End Kits

\* Air End Kit only includes sleeve and spool set, not entire air valve assembly

Note: Kits contain components specific to the material codes.



SANDPIPERPUMP.COM

eh2mdl4sm-rev1117 Tel: 866-777-6060 Fax: 866-777-6383

Springer Pumps, LLC

| 45<br>46 | 560.022.360<br>560.076.360 | O-ring<br>O-ring                         |
|----------|----------------------------|--|
| 47       | 560.106.360                | O-ring - Buna Nitrile (Stainless Wetted) |
|          | 560.106.363                | O-ring - FKM (Stainless Wetted)          |
|          | 560.106.364                | O-ring - EPDM (Stainless Wetted)         |
|          | 560.106.365                | O-ring - Neoprene (Stainless Wetted)     |
|          | 720.060.600                | Seal - PTFE (Stainless Wetted)           |
| 48       | 605.012.151                | Piston                                   |
| 49       | 618.003.330                | Plug, NPT 1/4" (Included with item #25)  |
| 50       | 618.007.330                | Plug, NPT 1"                             |
| (51)     | 620.011.114                | Plunger, Actuator                        |
| 52       | 677.001.542                | Ring, Wear                               |
| 53       | 685.043.120                | Rod, Connecting                          |
| (54)     | 720.004.360                | Seal, U-Cup                              |
| 55       | 720.022.360                | Seal, T Assembly with Backup Rings       |
| 56       | 720.034.000                | Seal, PSP Assembly with Energizer Ring   |
| 57       | 722.040.110                | Seat, Check Valve (Stainless Wetted)     |
| 58       | 807.047.080                | Stud                                     |
| 59       | 866.025.162                | Connector, Male                          |
| 60       | 866.040.162                | Fitting, Male 90° Elbow                  |
| 61       | 866.041.162                | Fitting, Male 90° Elbow                  |
| 62       | 900.001.330                | Washer, Lock 1/4"                        |
| 63       | 900.003.330                | Washer, Lock 1/2"                        |
| 64       | 900.004.330                | Washer, Lock 5/16"                       |
| 65       | 900.006.330                | Washer, Lock 7/16" (Stainless Wetted)    |
|          |                            |  |

#### PTFE Diaphragm Assembly

| 64       | 286.005.365 | Diaphragm                              |
|----------|-------------|--|
| 64<br>65 | 286.020.604 | Diaphragm, Overlay                     |
| 66       | 545.009.330 | Nut, Hex 5/8-11                        |
| 67       | 612.039.010 | Plate, Outer Diaphragm (Includes stud) |
| 68       | 612.047.330 | Plate, Inner Diaphragm                 |
| 69       | 900.007.330 | Washer, Lock 5/8"                      |
|          |             |  |

Website: www.springerpumps.com

Int'l: +001 267 404 2910

2 2

4

3: EXP VIEW

## Material Codes - The Last 3 Digits of Part Number

000.....Assembly, sub-assembly; and some purchased items 010.....Cast Iron 015.....Ductile Iron 020.....Ferritic Malleable Iron 080.....Carbon Steel, AISI B-1112 110.....Alloy Type 316 Stainless Steel 111 ..... Alloy Type 316 Stainless Steel (Electro Polished) 112.....Alloy C 113.....Alloy Type 316 Stainless Steel (Hand Polished) 114.....303 Stainless Steel 115..... 302/304 Stainless Steel 117.....440-C Stainless Steel (Martensitic) 120.....416 Stainless Steel (Wrought Martensitic) 148.....Hardcoat Anodized Aluminum 150.....6061-T6 Aluminum 152.....2024-T4 Aluminum (2023-T351) 155.....356-T6 Aluminum 156.....356-T6 Aluminum 157.....Die Cast Aluminum Alloy #380 158.....Aluminum Alloy SR-319 162.....Brass, Yellow, Screw Machine Stock 165.....Cast Bronze, 85-5-5-5 166.....Bronze, SAE 660 170.....Bronze, Bearing Type, Oil Impregnated 180.....Copper Alloy 305.....Carbon Steel, Black Epoxy Coated 306.....Carbon Steel, Black PTFE Coated 307.....Aluminum, Black Epoxy Coated 308.....Stainless Steel, Black PTFE Coated 309.....Aluminum, Black PTFE Coated 313.....Aluminum, White Epoxy Coated 330.....Zinc Plated Steel 332.....Aluminum, Electroless Nickel Plated 333.....Carbon Steel, Electroless Nickel Plated 335.....Galvanized Steel 337.....Silver Plated Steel 351.....Food Grade Santoprene® 353..... Geolast; Color: Black 354..... Injection Molded #203-40 Santoprene® Duro 40D +/-5; Color: RED 356.....Hytrel® 357.....Injection Molded Polyurethane 358..... Urethane Rubber (Some Applications) (Compression Mold) 359..... Urethane Rubber 360.....Nitrile Rubber Color coded: RED 363.....FKM (Fluorocarbon) Color coded: YELLOW

#### 364.....EPDM Rubber Color coded: BLUE 365.....Neoprene Rubber Color coded: GREEN 366.....Food Grade Nitrile 368.....Food Grade EPDM 371.....Philthane (Tuftane) 374.....Carboxylated Nitrile 375.....Fluorinated Nitrile 378.....High Density Polypropylene 379..... Conductive Nitrile 408.....Cork and Neoprene 425.....Compressed Fibre 426.....Blue Gard 440.....Vegetable Fibre 500.....Delrin® 500 502.....Conductive Acetal, ESD-800 503.....Conductive Acetal, Glass-Filled 506.....Delrin® 150 520.....Injection Molded PVDF Natural color 540.....Nylon 542.....Nylon 544.....Nylon Injection Molded 550.....Polyethylene 551.....Glass Filled Polypropylene 552.....Unfilled Polypropylene 555.....Polyvinyl Chloride 556.....Black Vinyl 558.....Conductive HDPE 570.....Rulon II® 580 ..... Ryton® 600.....PTFE (virgin material) Tetrafluorocarbon (TFE) 603.....Blue Gylon® 604 ..... PTFE 606 ..... PTFE 607.....Envelon 608.....Conductive PTFE 610.....PTFE Encapsulated Silicon 611.....PTFE Encapsulated FKM 632.....Neoprene/Hytrel® 633.....FKM/PTFE 634.....EPDM/PTFE 635.....Neoprene/PTFE 637.....PTFE, FKM/PTFE 638.....PTFE, Hytrel®/PTFE 639.....Nitrile/TFE 643.....Santoprene®/EPDM 644.....Santoprene®/PTFE 656.....Santoprene® Diaphragm and Check Balls/EPDM Seats 661.....EPDM/Santoprene® 666.....FDA Nitrile Diaphragm,

- Delrin and Hytrel are registered tradenames of E.I. DuPont.
- Nylatron is a registered tradename of Polymer Corp.
- Gylon is a registered tradename of Garlock, Inc.
- Santoprene is a registered tradename of Exxon Mobil Corp.
- Rulon II is a registered tradename of Dixion Industries Corp.
- Ryton is a registered tradename of Phillips Chemical Co.
- Valox is a registered tradename of General Electric Co.

#### 11 • Model EH2-M

SANDPIPERPUMP.COM

eh2mdl4sm-rev1117



Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC


PTFE Overlay, Balls, and Seals

668.....PTFE, FDA Santoprene®/PTFE

Website: www.springerpumps.com Int'l: +001 267 404 2910

# 3: EXP VIEW

## **Pilot Valve Assembly**

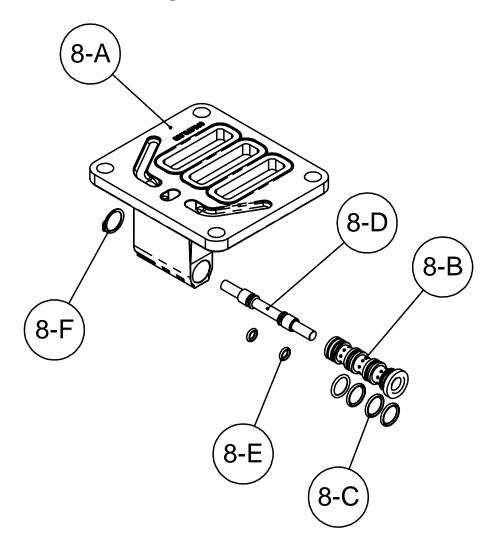

#### **Pilot Valve Servicing**

With Pilot Valve removed from pump.

- Step 1: Remove snap ring (8-F).
- Step 2: Remove sleeve (8-B), inspect O-Rings (8-C), replace if required.
- Step 3: Remove spool (8-D) from sleeve (8-B), inspect O-Rings (8-E), replace if required.
- Step 4: Lightly lubricate O-Rings (8-C) and (8-E).

Reassemble in reverse order.

#### IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

#### 12 · Model EH2-M

#### PILOT VALVE ASSEMBLY PARTS LIST

| Item | Part Number | Description           | Qty |
|------|-------------|-----------------------|-----|
| 8    | 095.073.001 | Pilot Valve Assembly  | 1   |
| 8-A  | 095.070.558 | Valve Body            | 1   |
| 8-B  | 755.025.000 | Sleeve (With O-Rings) | 1   |
| 8-C  | 560.033.360 | O-Ring (Sleeve)       | 4   |
| 8-D  | 775.026.000 | Spool (With O-Rings)  | 1   |
| 8-E  | 560.023.360 | O-Ring (Spool)        | 2   |
| 8-F  | 675.037.080 | Retaining Ring        | 1   |



Tel: 866-777-6060 Fax: 866-777-6383 SANDPIPERPUMP.COM

eh2mdl4sm-rev1117

Website: www.springerpumps.com Int'l: +001 267 404 2910

Springer Pumps, LLC

#### CHECK VALVE SERVICING

Need for inspection or service is usually indicated by poor priming, unstable cycling, reduced performance or the pump's cycling but not pumping. Inspect the surface of the check valve for surface imperfections. Replace as necessary.

#### DIAPHRAGM SERVICING/FILLING DRIVER FLUID

Motive power is delivered to the single diaphragm of the pump through a fluid cell located between the diaphragm and the drive piston. During preventative maintenance servicing (where the diaphragm has not ruptured, and the fluid cell is still filled), the fluid should be drained from the chamber by removing the pipe plug, in the lower most portion of inner chamber. To fill the fluid cell, the piston(s) must be on full discharge stroke. To do this and hold during fill procedure, remove the fitting from the cylinder cap and insert air pressure. This need not be more than 10 PSI. The pressure will move the piston(s) and hold them in the discharge position. Remove the pipe plug at the top of the fluid chamber, and fill the chamber with ethylene glycol (anti-freeze). The chamber will take 3000 ml (101.5 fluid ounces) of fluid. If the diaphragm and purge air from the fluid chamber. Fill the chamber to the top of the fill hole, and re-insert the pipe plug, using thread compound. If the glycol cell fluid is not compatible with the pumped product or would form a potentially dangerous mixture if the diaphragm ruptured, consult the factory before choosing an alternative fluid.

#### CYLINDER PISTON SERVICING

The driver fluid must be drained (see above) to service the cylinder piston. The piston seals are different on the air side versus the driver fluid side. Typically, the fluid side will require replacement before the air side. Remove the nuts and washers that secure the air side piston cap and inner fluid chamber to the intermediate bracket. The cylinders may now be removed. Inspect the cylinder wall carefully. Scratches can cause driver fluid to leak to the air side of the pump, which can find its way to the exhaust muffler. Scratches on the air cylinder will cause too much air to leak when on pressure stroke. The locknuts holding the cylinder to the rod can now be removed. Carefully inspect the piston for scratches, burrs and wear, especially if the piston seals are worn. The piston seals can now be inspected or replaced. AIR SIDE—The air side piston has a T-Seal. If the seal is worn showing flat areas or gouges, it will require replacement. Remove seal and back-up (spacer). Remove wear rings and carefully inspect for wear. During reassembly make sure the ends of the backup spacer and wear ring end are not across from each other. WET SIDE—The wet side piston has a yellow PSP seal. Inspect for flat spots and gouges. Behind the seal is an energizer ring that helps to load the seal against the cylinder wall. (The energizer ring is included with the new seal.) The wear rings are the same as on the air side. Again, make sure the ends are not across from each other. Reassembly of both pistons is the opposite of removal. Make sure the rod. Apply a heavy oil, such as STP or 50W gear oil, to the piston seals when sliding on the cylinder. The piston/nut should be torqued at 500 in-lbs. (56.49 Newton meters). The stude shad the secure the cylinders to the intermediate should be torqued at 250 in-lbs. (28.24 Newton meters).

**IMPORTANT NOTE:** Reassembly of the wet side piston/seal assembly differs from the air side in that it must be carefully pressed into the cylinder. An arbor press is commonly used for this task.

#### AIR VALVE LUBRICATION

The SANDPIPER pump's pilot valve and main air valve assemblies are designed to operate WITHOUT lubrication. This is the preferred mode of operation. There may be instances of personal preference or poor quality air supplies when lubrication of the compressed air supply is required. The pump air distribution system will operate with a properly lubricated compressed air supply. Proper lubrication of the compressed air supply would entail the use of an air-line lubricator available from Warren Rupp, set to deliver one drop of 10 wt., non-detergent oil for every 20 SCFM of air the pump consumed at its point of operation. Consult the pump's published performance curve to determine this. It is important to remember to inspect the sleeve and spool set routinely. It should move back and forth freely. This is most important when the air supply is lubricated. If a lubricator is used, oil accumulation will, over time, collect any debris from the compressed air. This can prevent the pump from operating properly. Water in the compressed air supply can create problems such as icing or freezing of the exhaust air causing the pump to cycle erratically, or stop operating. This can be addressed by using a point of use air dryer (available from Warren Rupp) to supplement a plant's air drying equipment. This device will remove excess water from the compressed air supply and reduce the frequency of icing or freezing.

#### ESADS: Externally Serviceable Air Distribution System

Please refer to the exploded view drawing and parts list in the Service Manual supplied with your pump. If you need replacement or additional copies, contact your local Warren Rupp Distributor, or the visit the Warren Rupp website. To receive the correct manual, you must specify the MODEL and TYPE information found on the name plate of the pump.

#### Main Air Valve

The main air valve sleeve and spool set is located in the valve body mounted on the pump with four hex head capscrews. The valve body assembly is removed from the pump by removing these four hex head capscrews.

With the valve body assembly off the pump, access to the sleeve and spool set is made by removing four hex head capscrews (each end) on the end caps of the valve body assembly. With the end caps removed, slide the spool back and forth in the sleeve. The spool is closely sized to the sleeve and must move freely to allow for proper pump operation. An accumulation of oil, dirt or other contaminants from the pump's air supply, or from a failed diaphragm, may prevent the spool from moving freely. This can cause the spool to stick in a position that prevents the pump from operating. If this is the case, the sleeve and spool set should be removed from the valve body for cleaning and further inspection. Remove the spool from the sleeve. Using an arbor press or bench vise (with an improvised mandrel), press the sleeve from the valve body. Take care not to damage the sleeve. At this point, inspect the o-rings on the sleeve for nicks, tears or abrasions. Damage of this sort could happen during assembly or servicing. A sheared or cut o-ring can allow the pump's compressed air supply to leak or bypass within the air valve assembly, causing the pump to leak compressed air from the pump air exhaust or not cycle properly. This is most noticeable at pump dead head or high discharge pressure conditions. Replace any of these o-rings as required or set up a routine, preventive maintenance schedule to do so on a regular basis. This practice should include cleaning the salve valve body easily, without shearing the o-rings. Re-install one end cap, gasket and bumper on the valve body. Using the arbor press or bench vise that was used in disassembly, press the sleeve back into the valve body. You may have to clean the surfaces of the valve body where the end caps mount. Material may remain from the old gasket. Old material not cleaned from this area may cause air leakage after reassembly. Take care that the bumper stays in place allowing the sleeve to press in all the way. Reinstall the spool, the opposite end cap, gasket and bumper on

#### PILOT VALVE ACTUATOR SERVICING

The bushings for the pilot valve actuators are threaded into the intermediate bracket from the outside. The plunger may be removed for inspection or replacement from the inside by removing the air distribution valve body and the pilot valve body from the pump. The plungers should be visible as you look into the intermediate from the top. Depending on their position, you may find it necessary to use a fine piece of wire to pull them out. Under rare circumstances, it may become necessary to replace the o-ring seal. The bushing can be pushed through the inner chamber by removing the outer chamber the assembly to reach the bushing.



SANDPIPERPUMP.COM

eh2mdl4sm-rev1117

Tel: 866-777-6060 Fax: 866-777-6383

Springer Pumps, LLC

Website: www.springerpumps.com Int'l: +001 267 404 2910

Model EH2-M • 13

## 5 - YEAR Limited Product Warranty

Warren Rupp, Inc. ("Warren Rupp") warrants to the original end-use purchaser that no product sold by Warren Rupp that bears a Warren Rupp brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Warren Rupp's factory. Warren Rupp brands include Warren Rupp<sup>®</sup>, SANDPIPER<sup>®</sup>, SANDPIPER Signature Series<sup>™</sup>, MARATHON<sup>®</sup>, Porta-Pump<sup>®</sup>, SludgeMaster<sup>™</sup> and Tranguilizer<sup>®</sup>.

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

> ~ See sandpiperpump.com/content/warranty-certifications for complete warranty, including terms and conditions, limitations and exclusions. ~



Fax: 866-777-6383

WARRANTY

Int'l: +001 267 404 2910

## WARREN RUPP, INC.

# **EC / EU Declaration of Conformity**

The objective of the declaration described is in conformity with the relevant Union harmonisation legislation: Directive 94/9/EC (until April 19, 2016) and Directive 2014/34/EU (from April 20, 2016).

#### Manufacturer:

Warren Rupp, Inc. A Unit of IDEX Corportion 800 North Main Street P.O. Box 1568 Mansfield, OH 44902 USA

#### **Applicable Standard:**

EN13463-1: 2001 EN13463-5: 2003 EN60079-25: 2004 Harmonised Standard: EN13463-1: 2009 EN13463-5: 2011 EN60079-25:2010

The harmonised standards have been compared to the applicable standards used for certification purposes and no changes in the state of the art technical knowledge apply to the listed equipment.

#### **AODD Pumps and Surge Suppressors**

Technical File No.: 203104000-1410/MER

#### AODD (Air-Operated Double Diaphragm) Pumps

EC Type Examination Certificate No. Pumps: KEMA 09ATEX0071 X

DEKRA Certification B.V. (0344) Meander 1051 6825 MJ Arnhem The Netherlands

## Hazardous Locations Applied:

 III 2 G Ex ia c IIC T5
 II 1 D c T100°C

 II 2 D Ex c iaD 20 IP67 T100°C
 II 2 G c T5

 II 2 G Eex m c II T5
 II 2 D c T100°C

 II 2 D c IP65 T100°C
 II 2 G c IIB T5



# DATE/APPROVAL/TITLE: 18 March 2016

# Tranquilizer®

Koseberri

David Roseberry, Director of Engineering



Tel: 866-777-6060 Fax: 866-777-6383 Springer Pumps, LLC