




# PWR-FLO™

NPF15.5" METALLIC PUMP PWR-FLO™ AIR DISTRIBUTION SYSTEM

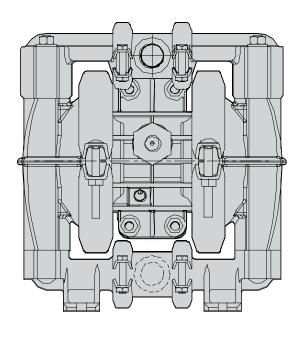

AIR-OPERATED O DOUBLE DIAPHRAGM O PUMPS

**ALUMINUM** Models 316 S.S. Models

Tel: 866-777-6060

Fax: 866-777-6383



A JDA Global Company



## **CAUTIONS - READ FIRST**



**CAUTION:** Do not apply compressed air to the exhaust port - pump will not function.



**CAUTION:** Do not over-lubricate air supply – excess lubrication will reduce pump performance. Pump is pre-lubed.



### **TEMPERATURE LIMITS:**

Neoprene -17.7°C to 93.3°C 0°F to 200°F Buna-N -12.2°C to 82.2°C 10°F to 180°F **EPDM** -15.1°C to 137.8°C -60°F to 280°F NOTE: Not all materials are available for all models. Refer to Section 2 for material options for your pump.



**CAUTION:** Check temperature limits for all wetted components. Example: Viton® has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).



**CAUTION:** Maximum temperature limit are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures.



**WARNING:** Prevention of static parking – if static sparking occurs, fire or explosion could result. Pump, valves, and containers must be grounded to a proper grounding point when handling flammable fluids and whenever discharge of static electricity is a hazard.



**CAUTION:** Do not exceed 8.6 bar (125psig) air supply pressure.



**CAUTION:** The process fluid and cleaning fluids must be chemically compatible with all wetted pump components.



CAUTION: Do not exceed 82°C (180°F) air inlet temperature.



**CAUTION:** Pumps should be thoroughly flushed before installing into process lines.



**CAUTION:** Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.



**CAUTION:** Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.



**CAUTION:** Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipeline debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.

**NOTE:** When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure a tight fit. (See torque specifications.)

**NOTE:** Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.



**CAUTION:** Tighten all hardware prior to installation.

## **Pump Designation System**



#### **Air Distribution System Liquid Port Size** 7,8 **Diaphragms & Valve Balls Fittings ATEX Wetted Parts Valve Seats** Connections Nomad 07mm/.25" Aluminum Buna - N/ Nitrile Aluminum N NPT ( Clamped В Trans-Flo 15mm/.5" Ductile Nordel/EPDM Stainless Steel В BSP Bolted 25mm/1" Stainless Steel Buna - N/Nitrile Gold TC Tri-Clamp Neoprene Pwr-Flo 40mm/1.5" Polypropylene PTFE (with Neoprene back-up) Neoprene Flanged Dura-Flo 50mm/2" Viton/FKM Nordel/EPDM **Air Chambers** 80mm/3" Aluminum Hytrel® Viton 100mm/4" Ductile Santoprene® Santoprene Stainless Steel Santoprene® - UFI Hytrel Mild Steel PTFE - UFI Polypropylene Polypropylene Garlock® - NEO BACKED Kynar **Center Block** Garlock® - EPDM BACKED Polyurethane Aluminum Garlock® - Viton BACKED Mild Steel Polypropylene Polyurethane 0-Ring Hytrel UFI Buna - N/Nitrile Air Valve Brass Polyurethane UFI Neoprene Polypropylene Nordel/EPDM Viton Aluminum PTFE Polyurethane Santoprene Viton Encap.

#### NTG 50 / AAAB / TF / TF / ATF / N / C / X **Air Distribution System Liquid Port Size Diaphragms & Valve Balls Fittings Connections Wetted Parts Valve Seats** ATEX NPT Clamped Nomad 50mm/2" Aluminum PTFE (with Buna back-up) Aluminum Trans-Flo **Air Chambers** 0-Ring Gold Aluminum PTFE Pwr-Flo **Center Block** Aluminum Air Valve Brass


Tel: 866-777-6060

Fax: 866-777-6383



# **How It Works - Pump**

The NOMAD diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

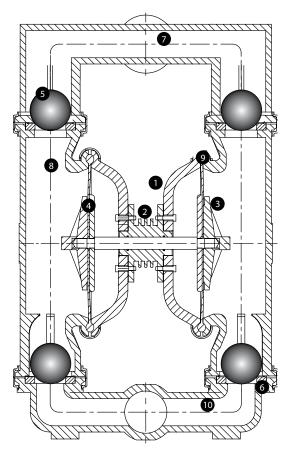

### 1. Air Chamber

The air chamber is the chamber that houses the air which powers the diaphragms.

#### 2. Air Distribution System

The air distribution system is the heart of the pump. The air distribution system is the mechanism that shifts the pump in order to create suction and discharge strokes.

#### 3. Lock Nut (Outer Diaphragm Piston)

The outer diaphragm pistons provide a means to connect the diaphragms to the reciprocating common shaft and to seal the liquid side from the air side of the diaphragm.

### 4. Holding plate (Inner Diaphragm Piston)

The inner piston is located on the air side of the pump and does not come into contact with the process fluid.

#### 5. Check Valve Ball

NOMAD air-operated pumps use suction and discharge check valves to produce directional flow of process fluid in the liquid chamber. The check valve balls seal and release on the check valve seats allowing for discharge and suction of process fluid to occur.

### 6. Check Valve Seat

The removable seats provide the ball valves a site to check.

#### 7. Discharge Manifold

Process fluid exits the pump from the discharge port located on the discharge manifold at the top of the pump.

### 8. Liquid Chamber

The liquid chamber is filled with the process fluid during the suction stroke and is emptied during the discharge stroke. It is separated from the compressed air by the diaphragms.

### 9. Diaphragm

The diaphragm membrane provides for separation of the process fluid and the compressed air power source. To perform adequately, diaphragms should be of sufficient thickness and of appropriate material to prevent degradation or permeation in specific process fluid applications. NOMAD offers a variety of diaphragm materials for your specific application requirements.

### 10. Inlet Manifold


Process fluid enters the pump from the intake port located on the inlet manifold at the bottom of the pump.


4


# **Dimensional Drawings**



### **NPF15 METAL**

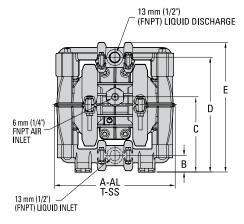

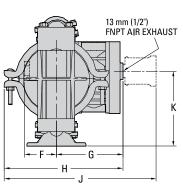

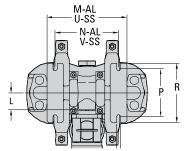


### DIMENSIONS

IIEM	METRIC (mm)	STANDARD (inch)
А	208	8.2
В	28	11
С	130	51
D	198	7.8
E	224	8.8
F	53	21
G	114	4.5
Н	206	81
J	262	103
K	130	51
L	30	12
M	137	5. <u>4</u>
N	109	43
Р	84	3.3
R	102	4 D
S	8	0.3
Т	203	۵.8
U	142	5 ه
V	112	4.4

BSPT threadsavailable.


REV.E

### **NPF15 METAL FDA**

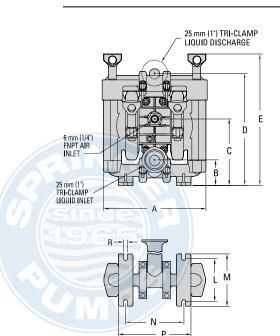

Tel: 866-777-6060

Fax: 866-777-6383

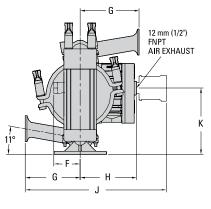

### DIM ENSIONS

IEM	METRIC (mm)	STANDARD (inch)
А	203	۵.8
В	53	21
С	130	51
D	218	8.6
E	257	101
F	53	21
G	114	4.5
Н	114	4.5
J	287	11.3
K	130	51
L	84	3.3
M	102	4.0
N	84	3.3
P	142	5.6
R	8	0.3

REV.D

5



### **Performance**

### **Rubber Fitted**

 Height
 .277 mm (10.9")

 Width
 .234 mm (9.2")

 Depth
 .201 mm (7.9")

Est. Ship Weight . . . . . . . . Aluminum 6 kg (13 lbs)

316 S.S. 9 kg (20 lbs)

 Air Inlet
 .6 mm (1/4")

 Inlet
 .13 mm (1/2")

 Outlet
 .13 mm (1/2")


 Section Lift
 .5.2 m Dry (17.0")

 8.7 m Wet (28.4")

<sup>1</sup>Displacement per stroke was calculated at 4.8 Bar (70 psig) air inlet pressure against a 2 Bar (30 psig) head pressure.

**Example:** To pump 32.9 lpm (8.7 gm) against a discharge head pressure of 4.1 Bar (60 psig) requires 5.5 Bar (80 psig) and 27.2 Nm <sup>3</sup>/h (16 scfm) air consumption. (See dot on chart)

Caution: Do not exceed 8.6 Bar (125 psig) air supply pressure.

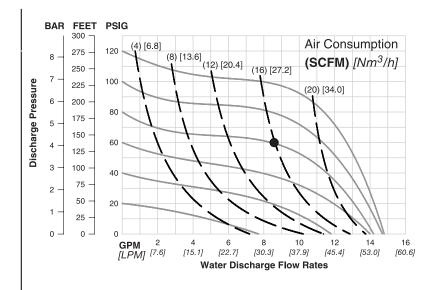

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

### PTFE Fitted

 Height
 .277 mm (10.9")

 Width
 .234 mm (9.2")

 Depth
 .201 mm (7.9")

Est. Ship Weight . . . . . . . Aluminum 6 kg (13 lbs)

316 S.S. 9 kg (20 lbs)

 Air Inlet
 .6 mm (1/4")

 Inlet
 .13 mm (1/2")

 Outlet
 .13 mm (1/2")

 Section Lift
 .4.5 m Dry (14.7")


 9.3 m Wet (30.6")

9.3 m Wet (30.6")

<sup>1</sup>Displacement per stroke was calculated at 4.8 Bar (70 psig) air inlet pressure against a 2 Bar (30 psig) head pressure.

**Example:** To pump 20.8 lpm (5.5 gm) against a discharge head pressure of 1.4 Bar (20 psig) requires 2.8 Bar (40 psig) and 13.6 Nm <sup>3</sup>/h (8 scfm) air consumption. (See dot on chart)

Caution: Do not exceed 8.6 Bar (125 psig) air supply pressure.

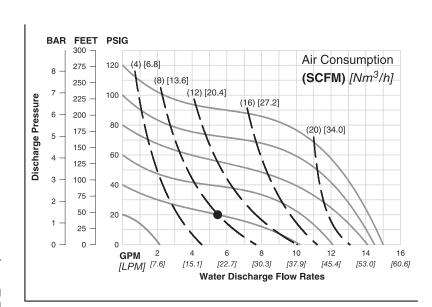

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

## **Suggested Installation**



### **INSTALLATION:**

- Suction pipe equal to/greater than pump diameter (same for discharge)
- Tighten all fasteners before use
- Suction connection should be non-collapsible

### **AIR SUPPLY:**

- Air line size must be large enough to create desired volume (see performance curve section)
- Do not exceed 8.6 BAR (125 PSIG)
- For best results, use 5 micron air filter
- Use lubricator with 5 wt. oil

### **PIPING:**

- Remove as many turns/elbows as possible
- Piping should be supported
- Flexible hose will avoid stress on pump fitting
- Gate Valve should be used in applications involving flooded suction
- In positive suction head conditions, limit inlet pressure to 0.5 - 0.7 BAR (7 - 10 PSI).
   Premature diaphragm failure will take place above the parameters.

ALL NOMAD PUMPS ARE CAPABLE OF PASSING SOLIDS. A STRAINER SHOULD BE USED ON THE PUMP INTAKE TO ENSURE THAT THE PUMP'S RATED SOLIDS CAPACITY IS NOT EXCEEDED.

CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE.




Tel: 866-777-6060

Fax: 866-777-6383



# **Suggested Installation**

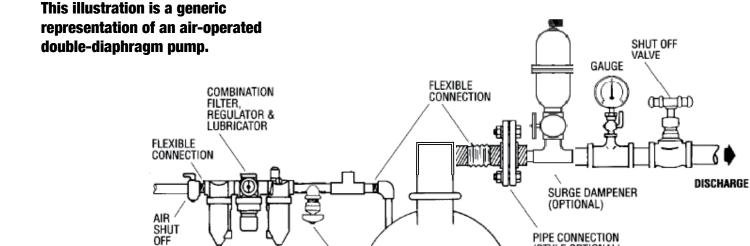

NEEDLE VALVE

**NOTE:** In the event of a power failure, the shut off valve should be closed, if the restarting of the pump is not desirable once power is regained.

SUCTION

**AIR OPERATED PUMPS:** To stop the pump from operating in an emergency situation, simply shut off valve (user supplied) installed

in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. The shut off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

(STYLE OPTIONAL)

MUFFLER

F00TPAD



### **Suggested Operation & Maintenance**



### Troubleshooting

### Pump will not run or runs slowly.

- 1. Ensure that the air inlet pressure is at least 0.4 Bar (5 psig) above start up pressure and that the differential pressure (the difference between air inlet and liquid discharge pressures) is not less than 0.7 Bar (10 psig).
- 2. Check air inlet filter for debris
- 3. Check for extreme air leakage (blow by) which would indicate worn seals/bores in the air valve.
- 4. Disassemble pump and check for obstructions in the air passageway.
- 5. Check for sticking ball check valves. If material being pumped is not compatible with pump, elastomer, swelling may occur. Replace ball check valves and seals with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.
- 6. Check for broken inner piston which will cause the air valve spool to be unable to shift.
- 7. Remove plug from pilot spool exhaust.

### Pump runs but little or no product flows.

- Check for pump cavitation; slow pump speed down to allow thick material to flow into liquid chambers.
- 2. Verify that vacuum required to lift is not greater than the vapor pressure of the material being pumped (cavitation).
- 3. Check for sticking ball valves. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seats with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.

Tel: 866-777-6060

Fax: 866-777-6383

### Pump air valve freezes.

 Check for excessive moisture in compressed air. Either install a dryer or hot air generator for compressed air. Alternatively, a coalescing filter may be used to remove the water from the compressed air in some applications.

### Air bubbles in pump discharge.


- 1. Check for ruptured diaphragm.
- 2. Check tightness of outer pistons.
- 3. Check tightness of fasteners and integrity of o-rings and seals, especially at intake manifold.
- 4. Ensure pipe connections are airtight

### Product comes out air exhaust.

- 1. Check for diaphragm rupture.
- 2. Check tightness of outer pistons to shaft.

# N M A D Exploded View & Parts Listing

## NPF15 Rubber Diaphragm-Fitted

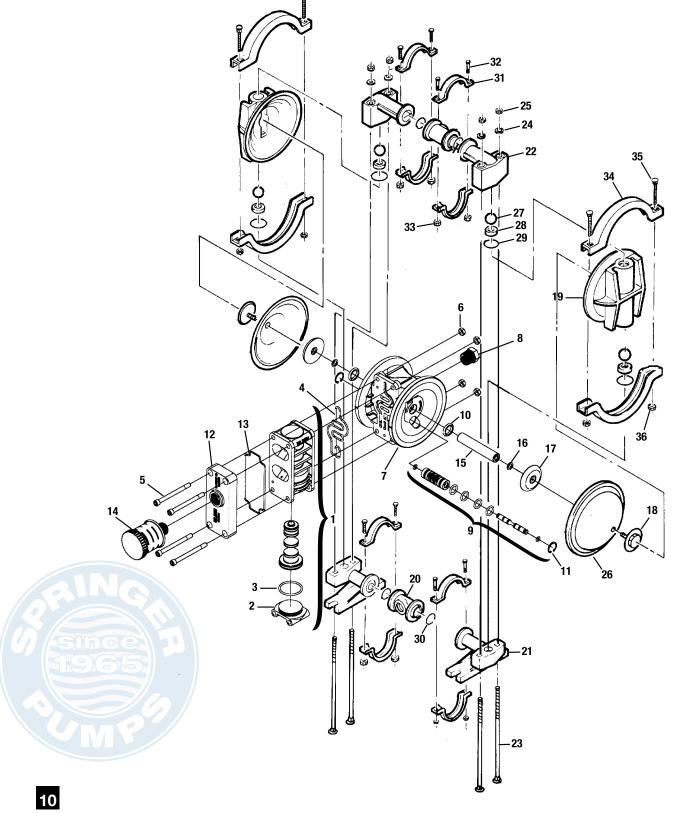

# Exploded View & Parts Listing N M A D



### **NPF15 RUBBER-FITTED**

No. Pa	art Description	Qty.	Aluminum	S.S.
1 Air	Valve Assembly	1	N01-2010-20	N01-2010-20
2 En	nd Cap	1	N01-2332-20	N01-2332-20
3 <b>O</b> -	Ring (-126). End Cap (Ø.1.362 x Ø.103)	1	N01-2395-52	N01-2395-52
4 Ga	asket, Air Valve	1	N01-2615-52	N01-2615-52
5 Sc	rew, HSHC, Air Valve (1/4"-20 x 3")	4	N01-6001-03	N01-6001-03
6 Nu	ıt, Hex ( 1/4" - 20)	4	N04-6400-03	N04-6400-03
7 Ce	enter Section Assembly	1	N01-3141-20	N01-3141-20
8 Bu	shing Reducer	1	N01-6950-20	N01-6950-20
9 Re	emovable Pilot Sleeve Assembly	1	N01-3880-99	N01-3880-99
10 Sh	naft seal	2	N01-3220-55	N01-3220-55
11 Re	etaining Ring	2	N00-2650-03	N00-2650-03
12 <b>M</b> u	uffler Plate	1	N01-3181-20	N01-3181-20
13 <b>G</b> a	asket, Muffler Plate	1	N01-3505-52	N01-3505-52
14 <b>M</b> u	uffler	1	N02-3510-99	N02-3510-99
15 Sh	aft	1	N01-3810-03	N01-3810-03
16 Dis	sc Spring	2	N01-6802-08	N01-6802-08
17 Inr	ner Piston	2	N01-3711-08	N01-3711-08
18 <b>O</b> u	uter Piston	2	N01-4570-01	N01-4570-03
19 Lic	quid Chamber	2	N01-5000-01	N01-5000-03
20 <b>M</b> a	anifold Tee Section	2	N01-5160-01	N01-5160-03
21 Inl	et Manifold Elbow	2	N01-5220-01	N01-5220-03
22 Dis	scharge Manifold Elbow	2	N01-5230-01	N01-5230-03
23 Sc	rew, SHCS (Chamber Bolt) (1/4" -20 x 7 3/8)	4	N01-6080-03	N01-6080-03
24 Ve	rtical Bolt Washer (.2811.D. x .6250.D. x .065THR)	4	N01-6730-03	N01-6730-03
25 <b>Ve</b>	rtical Bolt Nut (1/4" - 20)	4	N04-6400-03	N04-6400-03
26 <b>D</b> ia	aphragm	2	*N01-1010-51	*N01-1010-51
27 <mark>Va</mark>	lve Ball	4	*N01-1080-51	*N01-1080-51
28 <mark>Va</mark>	lve Seat	4	N01-1120-01	N01-1120-03
29 <mark>Va</mark>	lve Seat O-Ring	4	*N01-1200-51	*N01-1200-51
30 Ma	anifold O-Ring (Ø.987 x Ø.103)	4	*N01-1300-51	*N01-1300-51
31 Sn	nall Clamp Band Assembly	4	N01-7100-03	N01-7100-03
32 Sn	nall Clamp Band Bolt	8	N01-6101-03	N01-6101-03
33 <b>S</b> n	nall Clamp Band Nut (#10-24)	8	N01-6400-03	N01-6400-03
34 <b>La</b>	rge Clamp Band Assembly	2	N01-7300-03	N01-7300-03
35 <mark>La</mark>	rge Clamp Band Bolt (1/4" - 20 x 2 1/4")	4	N01-6070-03	N01-6070-03
36 La	rge Clamp Band Nut (1/4" - 20)	4	N04-6400-03	N04-6400-03

\*Consult Elastomer Options

Tel: 866-777-6060


Fax: 866-777-6383

Website: www.springerpumps.com

Int'l: +001 267 404 2910

# N M A D Exploded View & Parts Listing

### NPF15 PTFE Diaphragm-Fitted

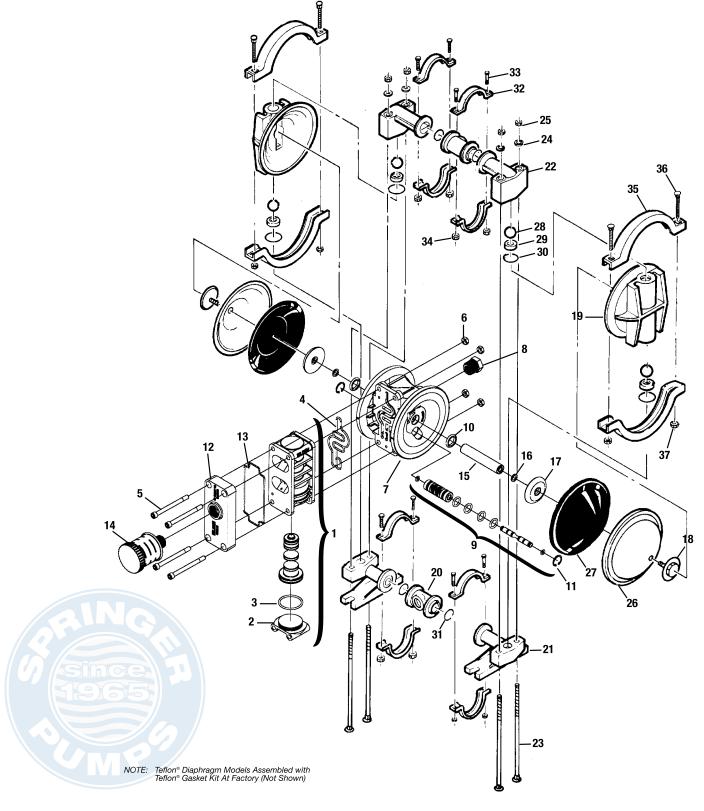

# Exploded View & Parts Listing N M A D




### **NPF15 PTFE-FITTED**

No. Part Description	Qty.	Aluminum	S.S.
1 Air Valve Assembly	1	N01-2010-20	N01-2010-20
2 End Cap	1	N01-2332-20	N01-2332-20
3 O-Ring (-126). End Cap (Ø.1.362 x Ø.10	03) 1	N01-2395-52	N01-2395-52
4 Gasket, Air Valve	1	N01-2615-52	N01-2615-52
5 Screw, HSHC, Air Valve (1/4"-20 x 3")	4	N01-6001-03	N01-6001-03
6 Nut, Hex ( 1/4" - 20)	4	N04-6400-03	N04-6400-03
7 Center Section Assembly	1	N01-3141-20	N01-3141-20
8 Bushing Reducer	1	N01-6950-20	N01-6950-20
9 Removable Pilot Sleeve Assembly	1	N01-3880-99	N01-3880-99
10 Shaft Seal	2	N01-3220-55	N01-3220-55
11 Retaining Ring	2	N00-2650-03	N00-2650-03
12 Muffler Plate	1	N01-3181-20	N01-3181-20
13 Gasket, Muffler Plate	1	N01-3505-52	N01-3505-52
14 Muffler	1	N02-3510-99	N02-3510-99
15 Shaft	1	N01-3810-03	N01-3810-03
16 Disc Spring	2	N01-6802-08	N01-6802-08
17 Inner Piston	2	N01-3711-08	N01-3711-08
18 Outer Piston	2	N01-4570-01	N01-4570-03
19 Liquid Chamber	2	N01-5000-01	N01-5000-03
20 Manifold Tee Section	2	N01-5160-01	N01-5160-03
21 Inlet Manifold Elbow	2	N01-5220-01	N01-5220-03
22 Discharge Manifold Elbow	2	N01-5230-01	N01-5230-03
23 Screw, SHCS (Chamber Bolt) (1/4" -20	x 7 3/8) 4	N01-6080-03	N01-6080-03
Vertical Bolt Washer (.2811.D. x .6250.D	D. x .065THR) 4	N01-6730-03	N01-6730-03
25 Vertical Bolt Nut (1/4" - 20)	4	N04-6400-03	N04-6400-03
26 PTFE Primary Diaphragm	2	*N01-1010-55	*N01-1010-55
27 Neoprene Backup Diaphragm	2	*N01-1060-51	*N01-1060-51
28 Valve Ball	4	*N01-1080-55	*N01-1080-55
29 Valve Seat	4	N01-1120-01	N01-1120-03
30 Valve Seat (-119) O-Ring (Ø.924 x Ø.10	03) 4	*N01-1200-55	*N01-1200-55
31 Manifold (120) O-Ring (Ø.987 x Ø.103)	4	*N01-1300-55	*N01-1300-55
31 Small Clamp Band Assembly	4	N01-7100-03	N01-7100-03
32 Small Clamp Band Bolt	8	N01-6101-03	N01-6101-03
33 Small Clamp Band Nut (#10-24)	8	N01-6400-03	N01-6400-03
34 Large Clamp Band Assembly	2	N01-7300-03	N01-7300-03
35 Large Clamp Band Bolt (1/4" - 20 x 2 1/	/4") 4	N01-6070-03	N01-6070-03
36 Large Clamp Band Nut (1/4" - 20)	4	N04-6400-03	N04-6400-03
Wing Nut	4	N/A	N/A



### 1/2" AIR VALVE ASSEMBLY WITH SHAFT HOUSING

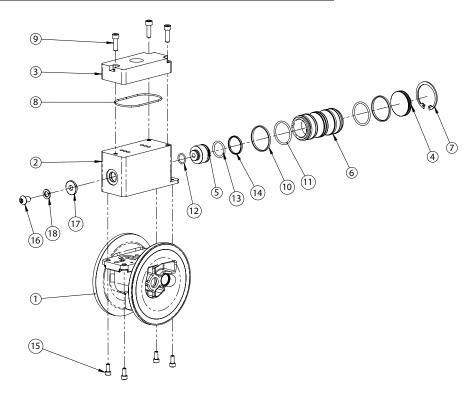

### 1/2" ALUMINUM PWR-FLO BILL OF MATERIAL

No.	Part Description	Qty.	Part Number	Sold Seperatly
1	CENTER PIECE FOR NPF15	1	N01-3140-01	Yes
2	1"- 1/2" AIR VALVE ASSEMBLY	1	N01-2010-01	Yes
	AIR VALVE BODY	1	N01-2010-01R	No
3	COVER	1	N01-3181-01	Yes
4	END CAP	1	N01-2334-23	No
5	DIFFERENTIAL CAP	1	N01-2335-01	No
6	AIR PISTON	1	N01-2655-23	No
7	INTERNAL CIRCLIP	1	N01-2657-03	No
8	O-RING FOR COVER	1	N01-3506-52	Yes
9	ALLEN BOLT	3	N01-6003-03-700	Yes
10	CFT RING BIG	7	N01-3211-99-700	No
113	O-RING BIG	7	N01-3212-52-700	No
12	O-RING SMALL	1	N01-3213-52-700	No
13	O-RING BIG FOR DIFFERNTIAL CAP	1	N01-3214-52-700	No
14	CFT RING FOR DIFFERNTIAL CAP	1	N01-3215-99-700	No
15	ALLEN BOLT	4	N01-6002-03-700	Yes
16	BUTTON HEAD SCREW	1	N01-6004-03-700	Yes
17	PLAIN WASHER	1	N01-6790-03-700	Yes
18	SPRING WASHER	1	N01-6791-03-700	Yes

14



A JDA Global Company

1645 W. Park Ave., Suite 200 Redlands, CA USA 92373 (909) 798-9532



NO BOUNDARIES<sub>TM</sub>



Tel: 866-777-6060

Fax: 866-777-6383

Springer Pumps, LLC