


NOMAD



NOMAD™

OPERATION MANUAL

NTG40 NOMAD TRANS-FLO™

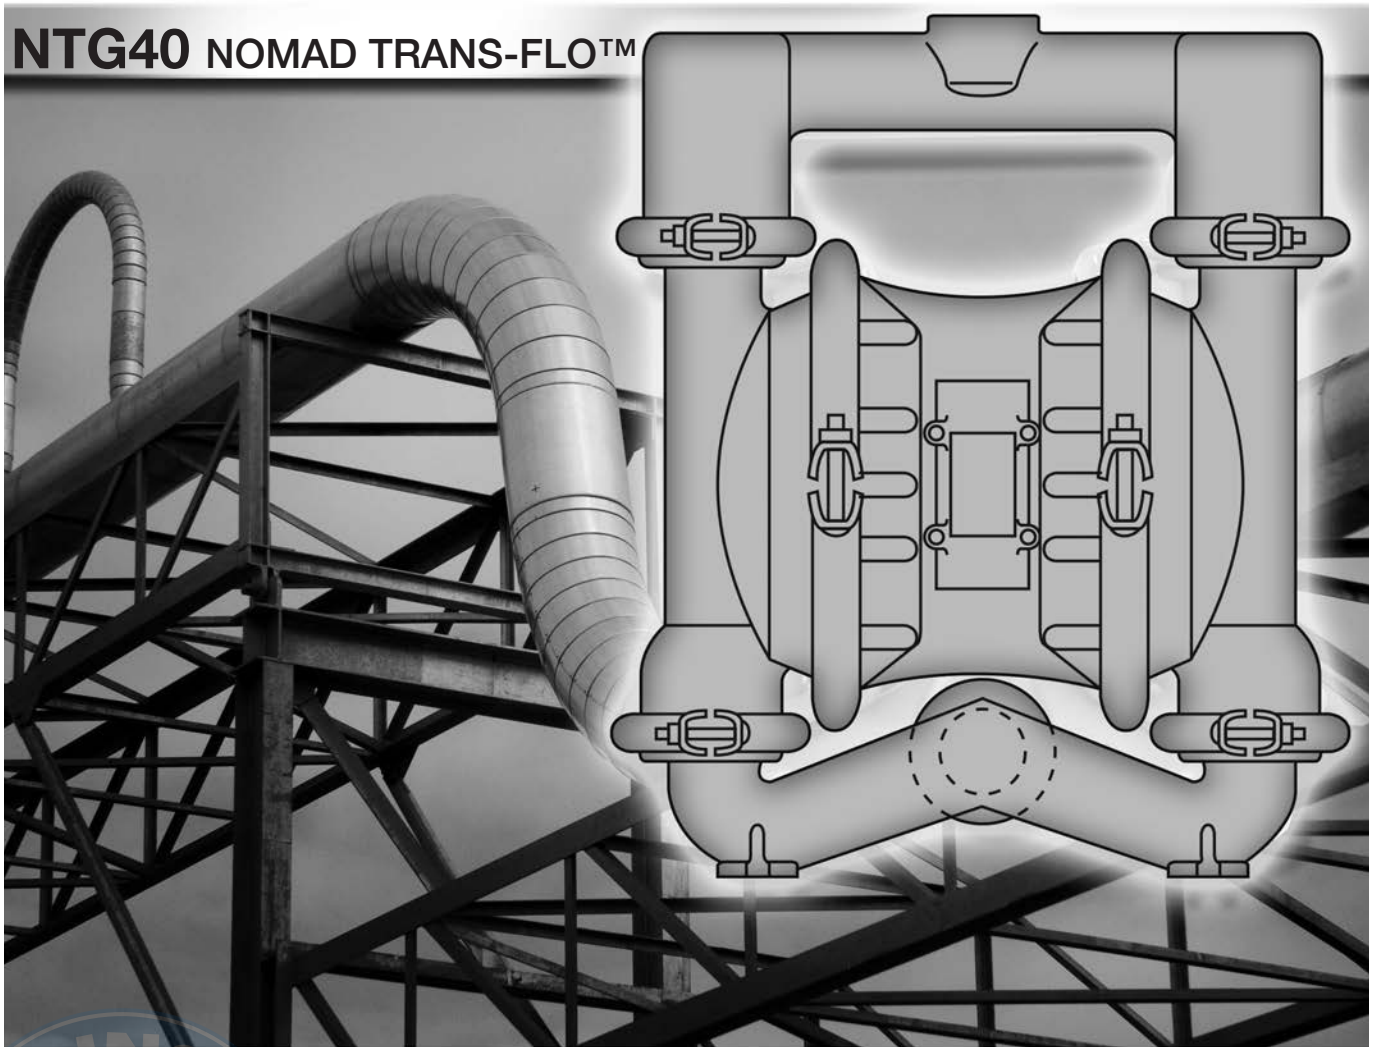

AIR-OPERATED



DOUBLE DIAPHRAGM



PUMPS

ALUMINUM Models

316 S.S. Models



A JDA Global Company

1/14, Rev. 3

Tel: 866-777-6060
Fax: 866-777-6383


Springer Pumps, LLC

Website: www.springerpumps.com
Int'l: +001 267 404 2910

CAUTION – SAFETY POINTS


TEMPERATURE LIMITS:		
Neoprene	-17.8°C to 93.3°C	0°F to 200°F
Buna-N	-12.2°C to 82.2°C	10°F to 180°F
EPDM	-51.1°C to 137.8°C	-60°F to 280°F
Viton®	-40°C to 176.7°C	-40°F to 350°F
Santoprene®	-40°C to 107.2°C	-40°F to 225°F
Polyurethane	12.2°C to 65.6°C	10°F to 150°F
Hytrel®	-28.9°C to 104.4°C	-20°F to 220°F
PTFE	4.4°C to 104.4°C	40°F to 220°F

1. Review the NOMAD Chemical Field Guide for all applications. The information provided is the “best thinking available” regarding chemical compatibility. The guide however, does not provide a recommendation.
2. Always wear safety glasses during pump operation. A diaphragm rupture may force liquid to exit via air exhaust.
3. When handling flammable fluids, prevent static sparking by properly grounding the pump.
4. Do not exceed 125 psig (8.6 bar).
5. Prior to maintenance, compressed air line should be disconnected to allow air pressure to bleed from pump.
6. Tighten all clamp bands and hardware parts prior to installation. Fittings may loosen during transportation.

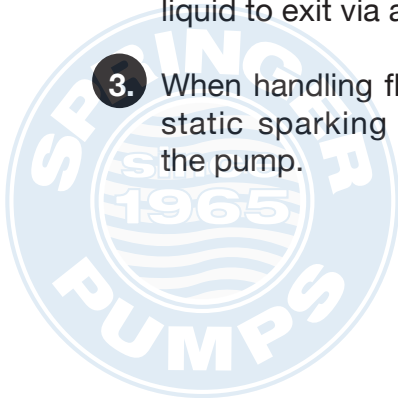

PUMP DESIGNATION SYSTEM

38 mm (1 – 1/2") Pump
Maximum Flow Rate:
307 lpm (81 gpm)

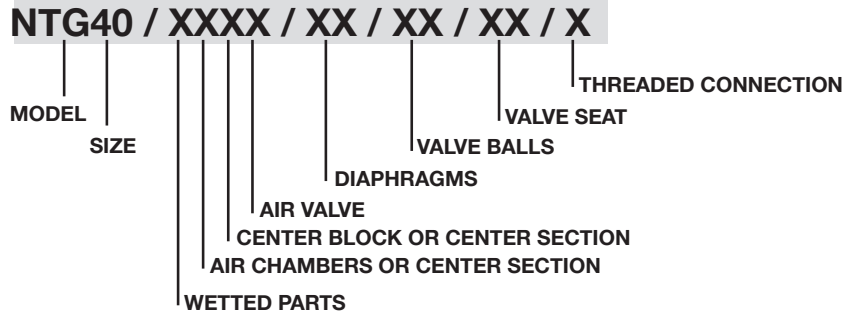

MATERIAL CODES

MODEL

NT40 = 38MM (1 – 1/2")

WETTED PARTS & OUTER PISTON

AA = ALUMINUM / ALUMINUM
 S = 316 S.S.

AIR CHAMBERS

P = POLYPROPYLENE
 (CENTER SECTION)

CENTER BLOCK

P = POLYPROPYLENE

AIR VALVE

B = BRASS

DIAPHRAGMS

BN = BUNA-N (Red Dot)
 FG = HYTREL
 ND = EPDM (Blue Dot)
 NE = NEOPRENE (Green Dot)
 SN = SANTOPRENE
 TF = PTFE
 VT = VITON

VALVE BALL

BN = BUNA-N (Red Dot)
 FS = HYTREL
 ND = EPDM (Blue Dot)
 NE = NEOPRENE (Green Dot)
 SN = SANTOPRENE
 TF = PTFE (White)


VALVE SEAT

A = ALUMINUM*
 S = STAINLESS*
 BN = BUNA-N (Red Dot)
 FG = HYTREL
 ND = EPDM (Blue Dot)
 NE = NEOPRENE (Green Dot)
 SN = SANTOPRENE
 VT = VITON

*Valve seat o-ring required.

VALVE SEAT O-RING

TF = PTFE

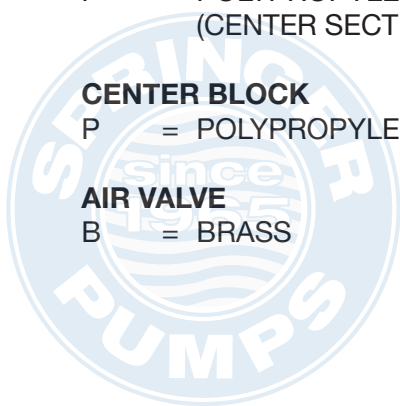

AIR OPERATED DOUBLE DIAPHRAGM PUMPS FUNCTIONALITY AND FLOW PATTERN

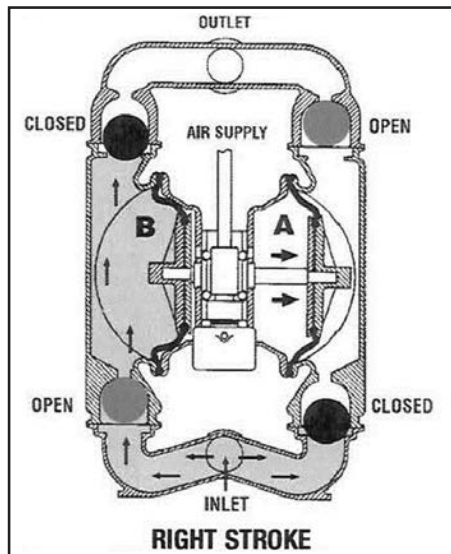


Figure 1: Air valve directs pressurized air to the back side of diaphragm A. Compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid, balancing the load and removing mechanical stress from the diaphragm. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to the atmosphere through the exhaust port of the pump. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).

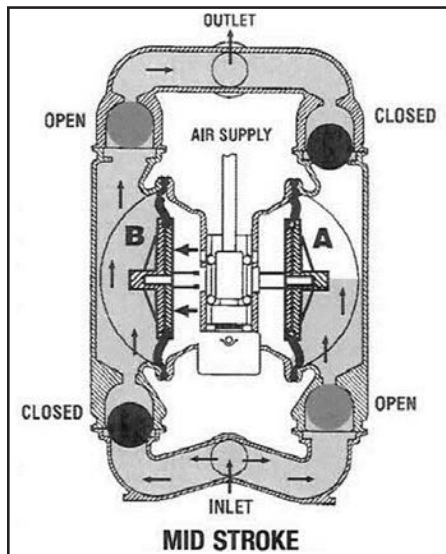


Figure 2: When the pressurized diaphragm, diaphragm A, reaches the limit of its discharge stroke, the air valve redirects pressurized air to the back side of the diaphragm B. The pressurized air forces diaphragm B away from the center block while pulling diaphragm A to the center block. Diaphragm B is now on its discharge stroke. These same hydraulic forces lift the discharge valve ball off its seat, while the opposite discharge valve ball is forced onto its seat, forcing fluid to flow through the pump discharge. Atmospheric pressure forces fluid into the inlet manifold of the pump. The inlet valve ball is forced off its seat allowing the fluid being pumped to fill the liquid chamber.


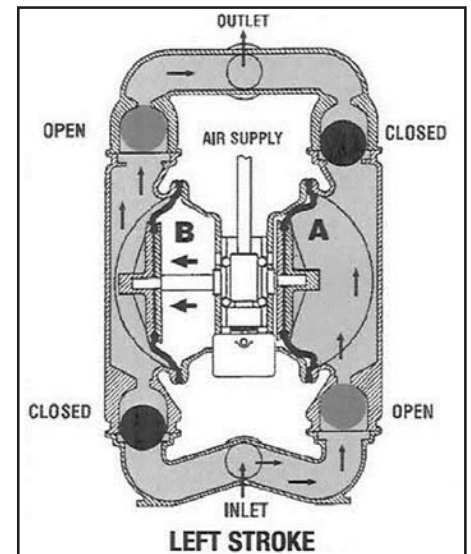


Figure 3: At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.

DIMENSIONAL DRAWINGS

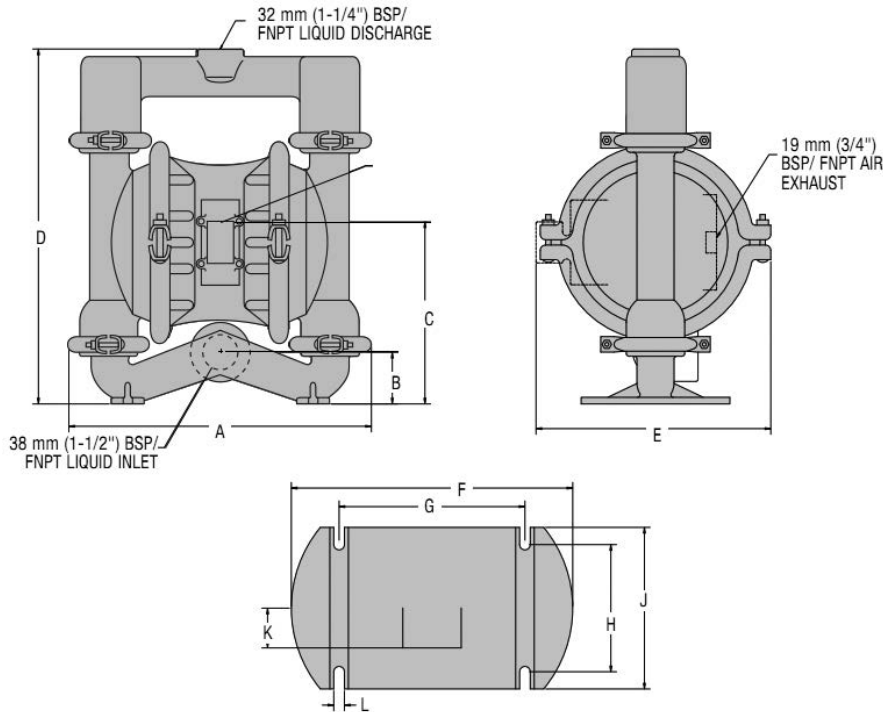

DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	391	15.4
B	63	2.5
C	219	8.6
D	442	17.4
E	285	11.2
F	338	13.3
G	224	8.8
H	152	6.0
J	193	7.6
K	67	2.6
L	11	0.4

BSP threads available.


PERFORMANCE NTG40 METAL RUBBER-FITTED

Height..... 442 mm (17.4")
 Width..... 391 mm (15.4")
 Depth..... 285 mm (11.2")
 Est. Ship Weight..... Aluminum 17 kg (38 lbs)
 316 S.S 26 kg (57 lbs)
 Air Inlet..... 13 mm (1/2")
 Inlet..... 38 mm (1-1/2")
 Outlet..... 32 mm (1-1/4")
 Suction Lift..... 5.49 m Dry (18')
 8.53 m Wet (28')
 Displacement/Stroke..... 1.02 l (0.27 gal.)¹
 Max. Flow Rate..... 288 lpm (76 gpm)
 Max. Size Solids..... 4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 113.6 lpm (30 gpm) against a discharge pressure head of 2.7 bar (40 psig) requires 4.1 bar (60 psig) and 25.5 Nm³/h (15 scfm) air consumption. (See dot on chart.)


Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

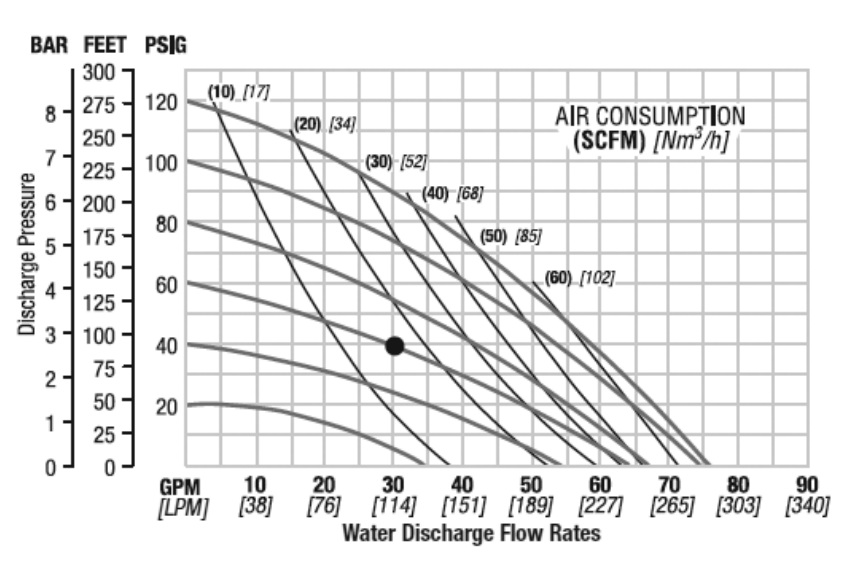

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

SUGGESTED INSTALLATION

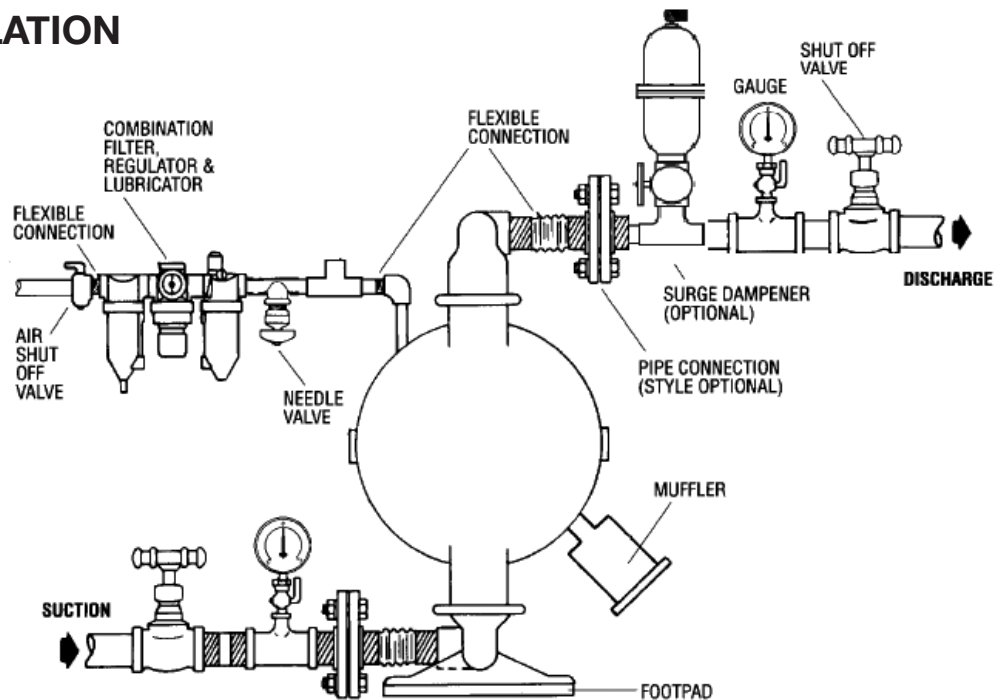

Note: In the event of a power failure, the shutoff valve should be closed, if the restarting of the pump is not desirable once power is regained.

TROUBLESHOOTING

Pump will not run or runs slowly.

1. Check air inlet screen and air filter for debris.
2. Check for sticking air valve, flush air valve in solvent.
3. Check for worn out air valve. If piston face in air valve is shiny instead of dull, air valve is worn beyond working tolerances and must be replaced.
4. Check center block rings. If worn excessively, they will not seal and air will simply flow through pump and out air exhaust.
5. Check type of lubricant being used. ISO 15-5 wt. recommended.

Pump runs but little or no product flows.

1. Check for pump cavitation; slow pump speed down to match thickness of material being pumped.
2. Check for sticking ball valves. If material being pumped is not compatible with pump elastomers, swelling may occur.
3. Make sure all suction connections are air tight.

Pump air valve freezes.

Check for excessive moisture in compressed air.

Air bubbles in pump discharge.

1. Check for ruptured diaphragm.
2. Check for tightness for clamp bands, especially at intake manifold.


Product comes out air exhaust.

1. Check for diaphragm rupture.
2. Check tightness of piston plates to shaft.


Pump rattles.

Create false discharge head or suction lift.

EXPLODED VIEW (RUBBER DIAPHRAGMS)

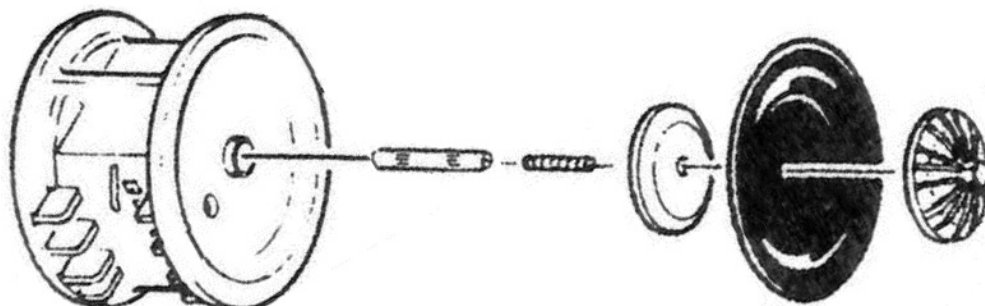

EXPLODED VIEW (PTFE DIAPHRAGMS)

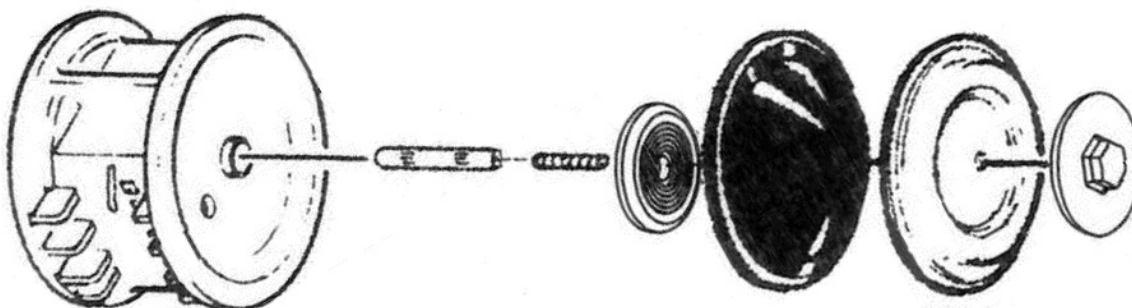


NTG40 RUBBER-FITTED

Item	Description	Qty.	Part Number
1	Air Valve Assembly	1	N04-2012-07
3	Air Valve End Cap w/ Guide	1	N04-2332-01
4	Pressure Differential Cap	1	N04-2301-01
5	Air Valve Snap Ring	2	N04-2651-52
6	Air Valve Cap O-ring	2	N04-3201-52
7	Air Valve Gasket	1	N04-2600-52
10	Center Section	1	N04-3150-20-225
11	Center Block TRACKER™ Seal	7	N04-3210-77-225
16	Shaft	1	N04-3800-03-07
17	Shaft Stud	2	N04-6150-08
18	Outer Piston	2	N04-4552-01
19	Inner Piston	2	N04-3700-01
21	Liquid Chamber	2	N04-5000-01
22	Clamp Band (Large)	2	N04-7330-08
23	Clamp Band (Small)	4	N04-7100-08
24	Discharge Manifold	1	N04-5021-01
25	Inlet Manifold	1	N04-5080-01
26	Air Valve Cap Screw 1/4" - 20 x 6-11/16"	4	N04-6000-08
29	Diaphragm - Neoprene	2	N04-1010-51
30	Valve Ball - Neoprene	4	N04-1080-51
31	Valve Seat - Neoprene	4	N04-1120-51
32	Large Clamp Band Bolt 5/16"	4	N04-6070-08
33	Large Hex Nut 5/16" - 18	4	N04-6420-08
34	Small Clamp Band Bolt 1/4" - 20 x 1-3/4"	8	N04-6050-08
35	Small Hex Nut 1/4" - 20	8	N04-6400-08
36	Muffler Plate	1	N04-3180-20
37	Muffler Plate Gasket	1	N04-3500-52
38	Air Valve Hex Nut 1/4"-20	4	N04-6400-08
39	Muffler	1	N04-3510-99

NTG40 RUBBER-FITTED 316 S.S.

18	Outer Piston	2	N04-4550-03
21	Liquid Chamber	2	N04-5000-03
22	Clamp Band (Large)	2	N04-7330-03
23	Clamp Band (Small)	4	N04-7100-03
24	Discharge Manifold	1	N04-5021-03
25	Inlet Manifold	1	N04-5080-03
26	Air Valve Cap Screw 1/4" - 20 x 6-1/4"	4	N04-6000-03
32	Large Clamp Band Bolt 5/16"	4	N04-6070-03
33	Large Hex Head Nut 5/16" - 18	4	N04-6420-03
34	Small Clamp Band Bolt 1/4" - 20 x 1-3/4"	8	N04-6050-03
35	Small Hex Head Nut 1/4" - 20	8	N04-6400-03
38	Air Valve Hex Nut 1/4" - 20	4	N04-6400-03

NTG40 RUBBER-FITTED

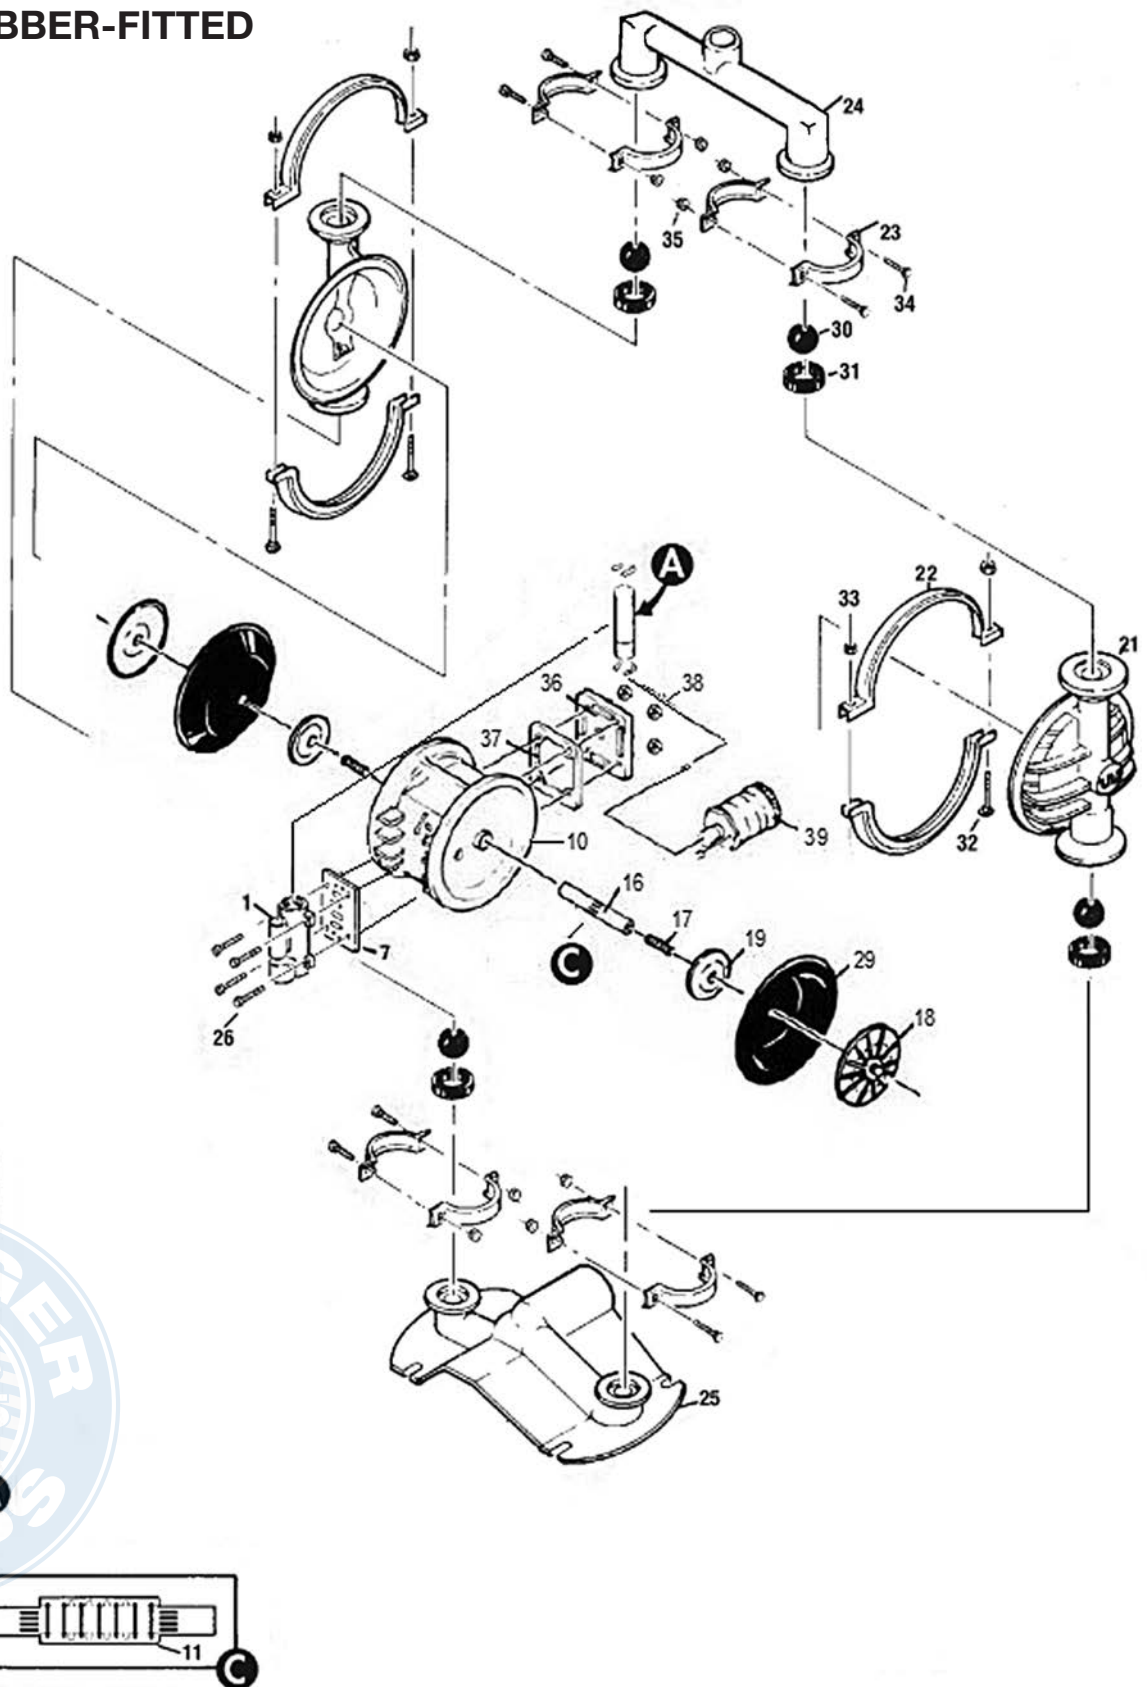


NTG40 PTFE-FITTED

Item	Description	Qty.	Part Number
1	Air Valve Assembly	1	N04-2012-07
3	Air Valve End Cap w/ Guide	1	N04-2332-01
4	Pressure Differential Cap	1	N04-2301-01
5	Air Valve Snap Ring	2	N04-2651-01
6	Air Valve Cap O-ring	2	N04-3201-52
7	Air Valve Gasket	1	N04-2600-52
10	Center Section	1	N04-3150-20-225
11	Center Block TRACKER™ Seal	7	N04-3210-77-225
16	Shaft	1	N04-3820-03-07
17	Shaft Stud	2	N04-6150-08
18	Outer Piston	2	N04-4600-01
19	Inner Piston	2	N04-3750-01
21	Liquid Chamber	2	N04-5000-01
22	Large Clamp Band	2	N04-7330-08
23	Small Clamp Band Assembly	4	N04-7100-08
24	Discharge Manifold	1	N04-5021-01
25	Inlet Manifold	1	N04-5080-01
26	Air Valve Cap Screw 1/4"-20 x 6-11/16"	4	N04-6000-08
29	Diaphragm	2	N04-1010-55
30	Valve Ball	4	N04-1080-55
31	Valve Seat	4	N04-1121-01
32	Large Clamp Band Bolt 5/16"-18 x 2-1/4"	4	N04-6070-08
33	Large Hex Nut 5/16" - 18	4	N04-6420-08
34	Small Clamp Band Bolt 1/4" -20 x 1-3/4"	8	N04-6050-08
35	Small Hex Nut 1/4" - 20	8	N04-6400-08
36	Muffler Plate	1	N04-3180-20
37	Muffler Plate Gasket	1	N04-3500-52
38	Air Valve Hex Nut 1/4"-20	4	N04-6400-08
39	PTFE Valve Seat O-Ring	4	N04-1200-55
40	Back-up Diaphragm	2	N04-1060-51
41	Muffler	1	N04-3510-99

NTG40 PTFE-FITTED 316 S.S.

18	Outer Piston	2	N04-4600-03
21	Liquid Chamber	2	N04-5000-03
22	Large Clamp Band	2	N04-7330-03
23	Small Clamp Band Assembly	4	N04-7100-03
24	Discharge Manifold	1	N04-5021-03
25	Inlet Manifold	1	N04-5080-03
26	Air Valve Cap Screw 1/4" - 20 x 6-11/16"	4	N04-6000-03
31	Valve Seat	4	N04-1112-03
32	Large Clamp Band Bolt 5/16" - 18 x 2-1/4"	4	N04-6070-03
33	Large Hex Nut 5/16" -18	8	N04-6420-03
34	Small Clamp Band Bolt 1/4" - 20 x 1-3/4"	8	N04-6050-03
35	Small Hex Nut 1/4" - 20	8	N04-6400-03
38	Air Valve Hex Nut 1/4" - 20	4	N04-6400-03

NTG40 PTFE-FITTED

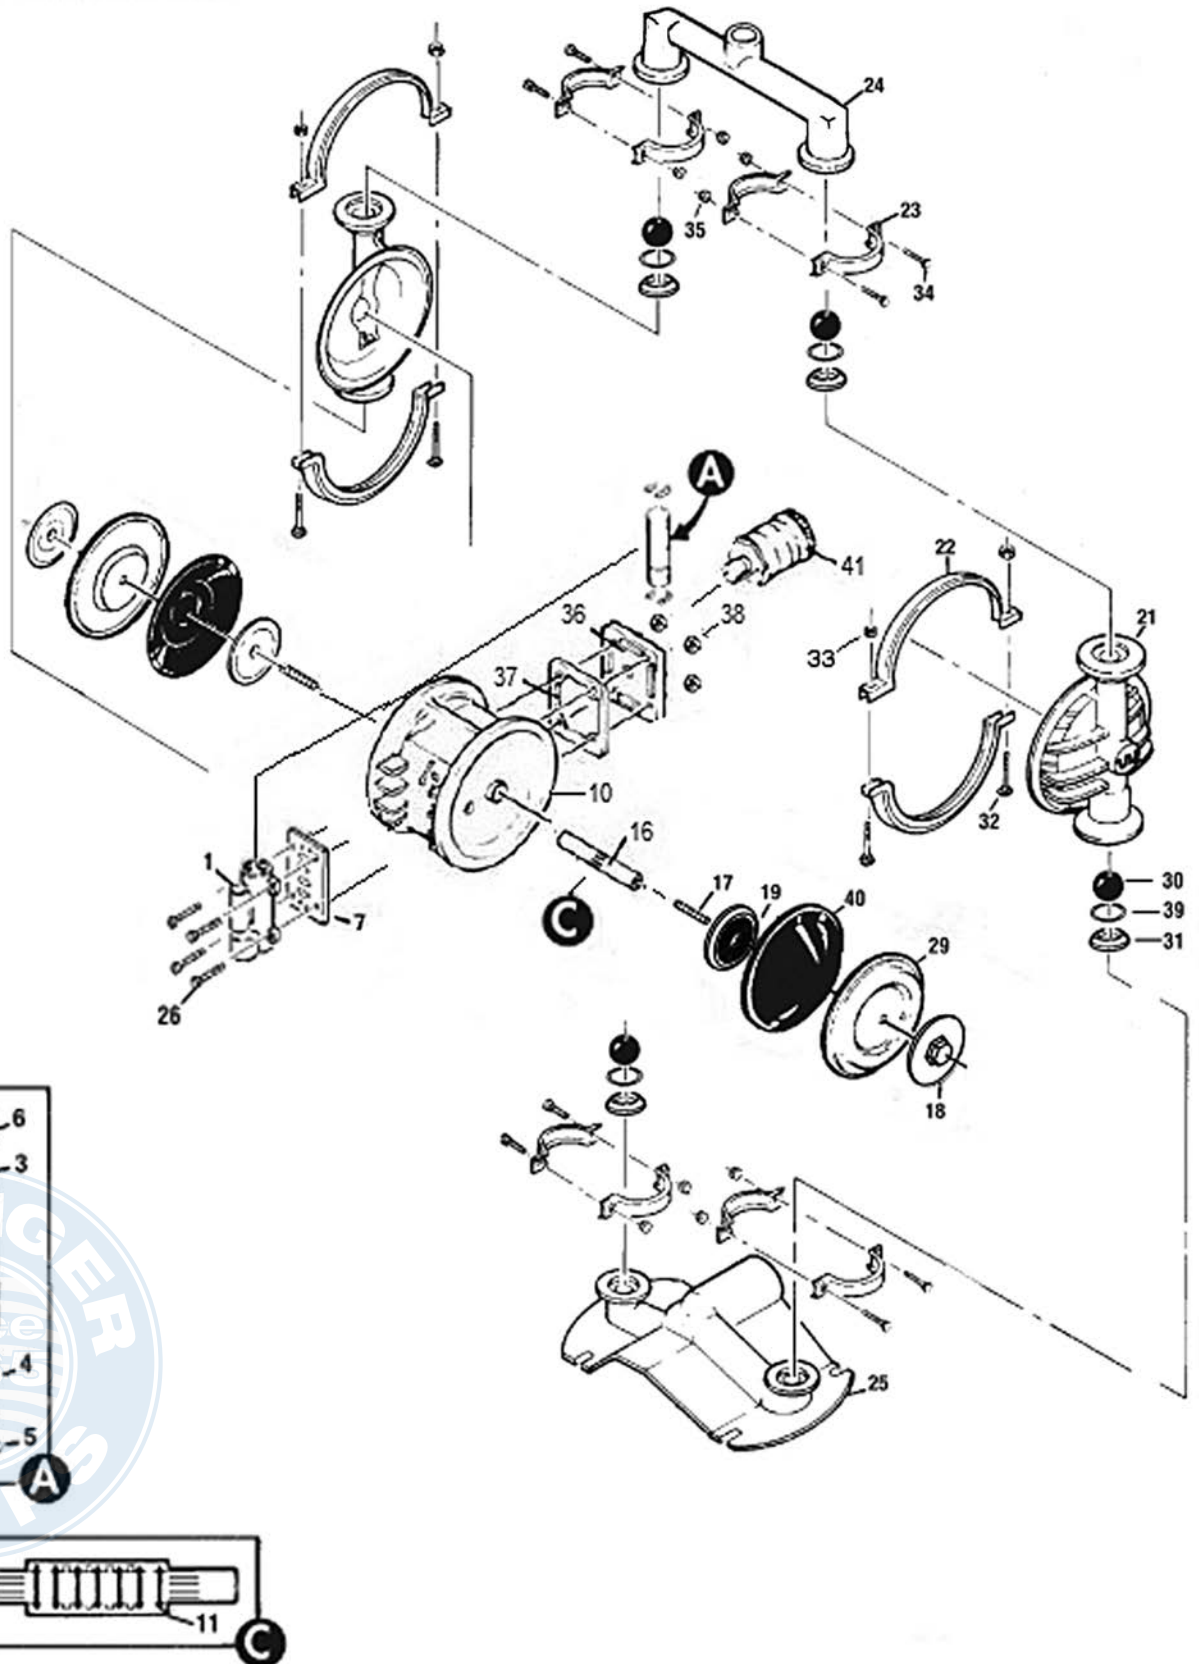



A JDA Global Company

1351 Park Ave., Suite 104
Redlands, CA USA 92373
(909) 798-9532

N  M A D TM



NO BOUNDARIES TM



Tel: 866-777-6060
Fax: 866-777-6383

Springer Pumps, LLC

Website: www.springerpumps.com
Int'l: +001 267 404 2910